

B GLOSSARY

MINING & METALLURGICAL TERMS.

R. W. RAYMOND




AU L HA













GLOSSARY


OF

MINING AND METALLURGICAL TERMS.

BY

R. W. RAYMOND, Ph.D., New York.

FROM VOLUME IX, TRANSACTIONS OF THE AMERICAN INSTITUTE OF MINING ENGINEERS.

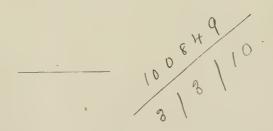

EASTON, PA .:

PUBLISHED BY THE INSTITUTE,

AT THE OFFICE OF THE SECRETARY, LAFAYETTE COLLEGE.

1881.

TW 9 R37.

A GLOSSARY OF MINING AND METALLURGICAL TERMS.

BY R. W. RAYMOND, PH.D., NEW YORK.

THE absence of a convenient glossary of terms connected with mining and metallurgy has long been felt by the general public. It is to meet this want, not to furnish a technical manual for experts, that the following glossary has been prepared. It originated in an attempt on my part to revise for publication the manuscript of a compilation prepared from the appendix of Yale's work on Mining Titles and one or two other sources, to serve as an appendix to a new work on mining law, about to be published by Mr. H. N. Copp, of Washington, D. C. This revision soon assumed, contrary to my original intention, the proportions of a reconstruction; and with the consent of Mr. Copp, and for the purpose of receiving from my fellow-members valuable aid, I presented my still incomplete work as a paper at the Lake Superior meeting of the Institute, inviting from any quarter suggestions of new terms or better definitions to be incorporated in the glossary before its final publication. This invitation was so widely and generously responded to, that I cannot undertake to make in this place individual acknowledgments to those members of the Institute, and professional colleagues outside of it, who have favored me with assistance and advice. The labor bestowed upon this paper since its presentation at the Lake Superior meeting has considerably exceeded that of its first preparation, as may be inferred from its great increase in length, as well as the numerous alterations which it has undergone. It could certainly be still further enlarged and improved; but I think a comparison of it with any of the glossaries of the same class now in print will show, at least, that it is an advance upon what has hitherto been accomplished. I shall be grateful, however, for further criticisms and suggestions; and I purpose at some future time to incorporate in a supplementary paper the results of such additional collections or corrections as I may obtain.

To avoid too great prolixity, I adopted at the outset the following general principles:

1. To include the most important technical words and phrases used by American miners and metallurgists, or occurring in English books and periodicals.

- 2. To exclude Spanish, French, and German terms, unless they fall under the rule above given. The Spanish terms included are in use among our miners in the far West and Southwest.
- 3. To exclude almost all purely scientific terms, such as those which denote the operations of chemical analysis, the chemical names and symbols of elements and compounds, the species of rocks and minerals, the principles of general physics and mechanics, etc.
 - 4. To avoid scientific and technical explanations.
- 5. To omit, in general, self-explanatory terms, and such as are common to all mechanical and manufacturing trades.

The grounds of these rules are evident. It was neither practicable nor necessary to give in this paper what could be, and must be, sought in technical textbooks or general dictionaries and cyclopædias. But the paper as presented, and to a still higher degree as now completed, presents numerous exceptions to the above rules. Many geological terms, for instance, are so common among miners, and many chemical terms are so common among metallurgists as to render their adoption in this catalogue justifiable. The difficulty has been to "draw the line;" and this has been done, as I must confess, somewhat arbitrarily, and rather under the influence of a desire not to overburden the *Transactions* of the Institute than in consistent obedience to any rule.

An apology should be made for the obscurity of a few of the definitions. Many terms taken from English glossaries were found to be most vaguely defined; and in most cases of this kind, I was able to improve the definitions; but there remain some with which I was neither sufficiently acquainted to amend them with certainty, nor sufficiently dissatisfied to strike them out altogether, nor sufficiently satisfied to let them stand without any explanation.

In many instances, the locality in which a term is believed to have originated or to be peculiarly in use, is indicated by abbreviations which will mostly explain themselves. The principal regions named are England, Scotland, Wales, France, Germany, the United States, Spain (including Mexico), Australia, Cornwall, Derbyshire, Staffordshire, Newcastle, Devonshire, Lake Superior, Pennsylvania, and the Pacific slope (including the mining districts of the Rocky Mountains). It must be understood that the naming, in this connection, of any one locality does not exclude the use of the term in other localities; and particularly that in this country the circulation both of miners and metallurgists, and of books and journals from all the world has brought into use a heterogeneous technical vocabu-

lary. This is especially the case in the gold, silver, and lead mining districts of the West, where all the names, phrases, and theories that anybody anywhere at any time has cultivated, together with a crop of indigenous, spontaneous growth, seem to flourish vigorously.

GLOSSARY.

Abstrich, GERM. The black or greenish-brown mass (black lith-arge) appearing upon the bath of work-lead early in the cupelling-process, and gradually, as the process advances, giving way to pure litharge.

Abzug, Germ. The first scum appearing (before the abstrich) on the surface of molten lead.

Adit. A nearly horizontal passage from the surface, by which a mine is entered and unwatered. In the United States an adit is usually called a tunnel, though the latter, strictly speaking, passes entirely through a hill, and is open at both ends.

Adlings, Eng. Earnings.

Adobe, Sp. Clay suitable for adobes or sun-dried bricks.

Adventurers, Eng. Shareholders or partners in a mining enterprise; in Cornwall, cost-book partners.

After-damp, Eng. The irrespirable gas, consisting of nitrogen and carbonic acid chiefly, remaining after an explosion of five-damp.

Agitator, PAC. See Settler.

Aich's metal. See Gun-metal.

Air-head, or Air-heading, S. STAF. A smaller passage, driven parallel with the gate-road, and near its roof, to carry the ventilating current. It is connected with the gate-road at intervals by openings called spouts.

Air-reduction process. See Roasting and Reaction process.

Aitch-piece. See H-piece.

Alberti furnace. A continuously working reverberatory furnace for the roasting of quicksilver ores, with condensation of the mercury in iron-tubes and brick chambers.

Alligator. 1. See Squeezer. 2. A rock-breaker operating by jaws. Alloy. A compound of two or more metals fused together.

Alluvium. The earthy deposit made by running streams, especially in times of flood.

Aludel. An earthen condenser for mercury. See Bustamente furnace.

Aluminium ores. Cryolite, a fluoride of sodium and aluminium,

found in Greenland; bauxite, a hydrous compound of alumina, ferric oxide and silica.

Amalgamation. 1. The production of an amalgam or alloy of mercury. 2. The process in which gold and silver are extracted from pulverized ores by producing an amalgam, from which the mercury is afterwards expelled. See *Retorting*.

Amalgamator. 1. A machine for amalgamating ores. 2. The workmen in charge of such a machine.

American forge. See Catalan forge.

Anemometer. An instrument for measuring the rapidity of an aircurrent.

Annealing. 1. The gradual cooling of glass or metal from a high temperature, to render it less brittle. 2. See Malleable castings.

Anthracite. See Coal.

Anticlinal. The line of a crest, above or under ground, on the two sides of which the strata dip in opposite directions. The converse of synclinal.

Antimony ores. Native antimony; stibnite (sulphide of antimony); valentinite and senar montite (oxides).

Apex. In the U.S. Revenue Statutes, the end or edge of a vein nearest the surface.

Apolvillados, Sp. Ores superior in quality to the azogues.

Appolt oven. An oven for the manufacture of coke, differing from the Belgian in that it is divided into vertical compartments.

 $Aprons. \ \ {\it See \ Copper-plates}.$

Arch, Corn. 1. A portion of a lode left standing when the rest is extracted, to support the hanging wall or because it is too poor for profitable extraction. 2. The roof of a reverberatory furnace.

Arenaceous. Silicious or sandy (of rocks).

Arends' tap. An arrangement by which the molten lead from the crucible of a shaft-furnace is drawn through an "inverted siphon" into an exterior basin, from which it can be ladled without disturbing the furnace.

Arenillos, Sp. Refuse earth.

Argentiferous. Containing silver.

Argillaceous. Containing clay.

Arm. The inclined member or leg of a set or frame of timber.

Arrastre, Sp. Apparatus for grinding and mixing ores by means of a heavy stone dragged around upon a circular bed. The arrastre is chiefly used for ores containing free gold, and amalgamation is

combined with the grinding. Sometimes incorrectly written arraster, arrastra, or raster.

Arroba, Sp. Twenty-five pound avoirdupois.

Arsenic ores. Native arsenic; mispickel (arsenopyrite, arsenical Pyrites, arseno-sulphide of iron).

Ascension-theory. The theory that the matter filling fissure-veins was introduced in solution from below.

Ash-pit. The receptacle for ashes under a fire-place.

Assay. To test ores and minerals by chemical or blowpipe examination; said to be in the dry way when done by means of heat (as in a crucible), and in the wet or humid way when by means of solution and precipitation or liquid tests. An assay differs from a complete analysis in being confined to the determination of certain ingredients, the rest not being determined. Both assays and analyses may be either qualitative or quantitative; that is, they may determine the presence merely, or also the amount, of some or all of the constituents of the substance examined. The assay value of gold and silver ores is usually determined in Troy ounces (or, for gold, pennyweights) per ton (2000 pounds avoirdupois) of ore. See Assay ton. When reported in money value, the ounce of gold is taken at \$20,6718. A ton of pure gold would be worth \$602,928.51; the value of \$6 per ton would be by weight one-thousandth per cent., and so on. Silver varies greatly in market value; but assavers often report their results according to the old U.S. standard, which made the ounce of pure silver worth \$1.2929. The ton of silver at this rate, would be worth \$37,710.40; the value of \$37 per ton would be by weight one-tenth per cent., and so on. For ordinary gold and silver ores, it is evident that the percentages would be inconveniently small as expressions of value. Assays of lead, copper, iron, etc., are reported in percentages.

Assay-ton. A weight of 29.166\(^2_3\) grams. Since one ton of 2000 pounds avoirdupois contains 29.166\(^2_3\) troy ounces, it is evident that each milligram of gold or silver obtained from one assay-ton of ore represents one ounce troy to the ton of 2000 pounds avoirdupois.

Assessment-work, PAC. The work done annually on a mining claim to maintain possessory title.

Astel. Overhead boarding or arching in a gallery.

Astyllen, Exc. A small dam in an adit or level, to check water.

Atierres, Sp. Refuse ores.

Attle, CORN. Refuse rock.

Auger-nose shell. See Wimble.

Auger-stem. The bar to which a drilling-bit is attached.

Augèt or Augètte. A priming tube, used in blasting.

Augustin process. The treatment of silver ores by chloridizing, roasting, lixiviation with hot brine, and precipitation with copper.

Auriferous. Containing gold.

Average produce, Corn. The quantity of pure or fine copper in one hundred parts of ore.

Average standard, CORN. The price per ton of pure or fine copper in the ore.

Aviador, Sp. A person who habilitates a mine; that is, who furnishes the money for working it by a contract with proprietors.

Azogueria, Sp. 1. The amalgamating works. 2. The processs of amalgamation.

Azogues, Sp. Common or inferior ores.

Back, Corn. 1. With reference to an adit, drift or stope, the part of the vein between it and the next working above, or the surface. 2. See Face.

Back-casing, Eng. A temporary shaft-lining of bricks laid dry, and supported at intervals upon curbs. When the stone-head has been reached, the permanent masonry lining is built upon it inside of the back-casing.

Back-end, Newc. The part of a judd remaining after the sump has been removed.

Backing deals, Newc. Planks driven vertically behind the curbs in a shaft from one curb to another.

Back-shift. The second set of miners working in any spot each day.

Back-skin, Newc. A leather covering worn by men in wet workings.

Bait, NEWC. A pitman's provisions.

Bal, Corn. A mine.

Balance-bob. A heavy lever ballasted at one end, and attached at the other to the pump-rod, the weight of which it thus helps to carry. When the shaft is deep, and the pump-rods are consequently very heavy, balance-bobs are put in at intervals of 200 or 300 feet, thus relieving the strain on the rods themselves and on the engine.

Balk, Newc. A hitch producing a nip.

Balland, Derb. Pulverulent lead ore.

Ballast-shovel. A round-mouthed shovel.

Balling. The aggregation of iron in the puddling or the bloomary process into balls or loups.

Ball-stamp, LAKE SUP. A stamp for crushing rock, operated directly by steam-power, the stem of the stamp being at the same time the piston-rod of a steam cylinder.

Band, Newc. Stone interstratified with coal.

Bank 1. (Derb. or Benk). The face of the coal at which miners are working. 2. An ore-deposit or coal-bed worked by surface excavations or drifts above water-level. 3. Eng. The ground at the top of a shaft. Ores are brought "to bank," i. e., "to grass." See Grass.

Banksman, Newc. See Lander.

Bar. 1. A drilling or tamping-rod. 2. A vein or dike crossing a lode.3. A sand or rock ridge crossing the bed of a stream.

Bar-diggings, PAC. Gold-washing claims located on the bars (shallows) of a stream, and worked when the water is low, or otherwise with the aid of coffer-dams.

Barilla, Sp. Native copper disseminated in grains in copper ores.

Barmaster, Derb. A mining official who collects the dues or royalties, presides over the barmote, etc. (From Germ. Bergmeister.)

Barmote, Derb. A mining court.

Barney. A small car attached to a rope and used to push cars up a slope or inclined plane.

Barranca, Sp. A ravine.

Barrel. 1. The water-cylinder of a pump. 2. A piece of small pipe inserted in the end of a cartridge to carry the squib to the powder. 3. A vessel used in amalgamation.

Barrel-amalgamation. The amalgamation of silver ores by revolution in wooden barrels with quicksilver, metallic iron, and water.

Barrel-work, Lake Sup. Native copper occurring in pieces of a size to be sorted out by hand in sufficient purity for smelting without mechanical concentration.

Barrier-pillars. Pillars of coal, larger than ordinary, left at intervals to prevent too extensive crushing when the ground comes to be robbed.

Barrow, CORN. 1. A heap of attle or rubbish; a dump. 2. A vehicle in which ore, coal, etc., are wheeled.

Barrowmen, Newc. See Putters.

Burrow-way, Newc. A level through which coal or ore is wheeled.

Base bullion. See Bullion.

Base metals. The metals not classed as noble or precious. See Noble metals.

Basic. In furnace practice, a slag in which the earthy bases are in excess of the amount required to form a nentral slag with the silica present.

Basic lining. A lining for furnaces, converters, etc., formed of non-silicious material, usually limestone, dolomite, lime, magnesia, or iron oxide.

Basic-lining process. An improvement of the Bessemer process, in which, by the use of a basic lining in the converter and by the addition of basic materials during the blow, it is possible to eliminate phosphorus from the pig iron, and keep it out of the steel.

Basin. 1. A natural depression of strata containing a coal bed or other stratified deposit. 2. The deposit itself.

Bass or batt. See Bind.

Basset, Derb. An outcrop; the edge of a stratum.

Batch, CORN. The quantity of ore sent to the surface by a pare of men.

Batea, Sp. A large wooden bowl in which gold-bearing earth or crushed ore is washed in the same way as in a pan.

Bath. A mass of molten material in a furnace, or of solution in a tank.

Batt. See Bind.

Battery. 1. A set of stamps in a stamp-mill, comprising the number which fall in one mortar, usually five. 2. A bulkhead of timber. 3. The plank closing the bottom of a coal-chute.

Battery-amalgamation. Amalgamation by means of mercury placed in the mortar.

Battery-assay. See Pulp-assay.

Bauxite. See Aluminium-ores.

Beans, NEWC. Small coals.

Bean-shot. Copper granulated by pouring into hot water.

Bear. 1. See Salamander. 2. See Loup.

Bearing. See Strike.

Bed. A seam or deposit of mineral, later in origin than the rock below, and older than the rock above; that is to say, a regular member of the series of formations, and not an intrusion.

Bedded vein. Properly bed-vein (Lagergang of the Germans); a lode occupying the position of a bed, that is, parallel with the stratification of the inclosing rocks.

Bede. A miner's pickaxe.

Bed-rock, PAC. The solid rock underlying alluvial and other surface formations.

Bed-way. An appearance of stratification, or parallel marking, in granite.

Beehive oven. An oven for the manufacture of coke, shaped like the old-fashioned beehive.

Belgian oven. A rectangular oven with end-doors and side-flues for the manufacture of coke.

Belgian zinc-furnace. A furnace in which zinc is reduced and distilled from calcined ores in tubular retorts.

Bell and hopper. See Cup and cone.

Belly-helve, Eng. A forge-hammer, lifted by a cam which acts about midway between the fulcrum and the head.

Bell-metal. A hard bronze, containing sometimes small proportions of iron, zinc, or lead, but ordinarily consisting of 78 parts copper to 22 tin.

Bell's dephosphorizing process. The removal of phosphorus from molten pig iron in a puddling furnace, lined with iron oxide and fitted with a mechanical rabble to agitate the bath. Red-hot iron ore is added. See Krupp's washing process.

Bench. 1. One of two or more divisions of a coal seam, separated by slate, etc., or simply separated by the process of cutting the coal, one bench or layer being cut before the adjacent one. 2. To cut the coal in benches.

Benching-up, Newc. Working on the top of coal.

Bend or Bind, DERB. Indurated clay.

Beneficiar, Sp. To benefit. To work or improve a mine; to reduce its ores; to derive profit or advantage from working it. Beneficiation, sometimes used in English, usually means the reduction of ores.

Bessemer iron. Pig iron suitable for the Bessemer process.

Bessemer process. The process of decarburizing a bath of molten cast iron by blowing air through it, in a vessel called a converter.

Biche. A tool ending below in a conical cavity, for recovering broken rods from a bore-hole.

Billet. 1. Iron or steel, drawn from a pile, bloom, or ingot into a small bar for further manufacture. 2. A small bloom.

Bind, DERB. See Bend.

Bing, NORTH ENG. Eight hundred weight of orc.

Bing-ore, Derb. Ore in lumps.

Bing-hole, DERB. A hole or shoot through which ore is thrown.

Bing-tale, NORTH ENG. See Tribute.

Bismuth-ores. Native bismuth; bismuth ochre (oxide); bismuthine (sulphide); also, bismuthiferons cobalt, silver and copper ores.

Bit. The cutting end of a boring implement.

Bituminous coal. See Coal.

Black-band. An earthy carbonate of iron, accompanying coalbeds. Extensively worked as an iron ore in Great Britain, and somewhat in Ohio.

Black-copper. Impure copper from smelting, before refining.

Black-damp, Eng. Carbonic acid gas.

Black-ends, Eng. Refuse coke from coking-ovens.

Black-flux. A mixture of charcoal and potassium carbonate.

Black-jack, Corn. Zinc-blende; sometimes hornblende.

Black-lead. Graphite.

Black litharge. See Abstrich.

Black-plate. Sheet iron before tinning.

Black-tin, Corn. Tin ore prepared for smelting.

Blair process. An improved form of the Chenot process.

Blanch. Lead ore, mixed with other minerals.

Blanched copper. An alloy of copper and arsenic.

Blanket-sluices. Sluices in which coarse blankets are laid, to catch the fine but heavy particles of gold, amalgam, etc., in the slime passing over them. The blankets are removed and washed from time to time, to obtain the precious metal.

Blast. 1. The operation of blasting, or rending rock or earth by means of explosions. 2. The air forced into a furnace to accelerate combustion. 3. The period during which a blast furnace is in blast, that is, in operation.

Blast furnace. A furnace, usually a shaft-furnace, into which air is forced under pressure.

Blasting-stick. A simple form of fuse.

Bleaching-clay, Corn. Kaolin, used with size, to whiten and give weight and substance to cotton goods.

Bleiberg furnace. See Carinthian furnace.

Blende. See Zinc-ores.

Blick, Germ. The brightening or iridescence appearing on silver or gold at the end of the cupelling or refining process.

Blind level. 1. A level not yet connected with other workings.

2. A level for drainage, having a shaft at either end, and acting as an inverted siphon.

Blind-shaft. See Winze.

Blister-steel. See Steel.

Bloat. A hammer swelled at the eye.

Block-coal, U.S. See Coal.

Block-furnace. See Bloomary.

Block-tin. Cast tin.

Bloom. 1. A large steel bar, drawn from an ingot for further manufacture. 2. A rough bar of iron, drawn from a Catalan or bloomary ball, for further manufacture. See Billet.

Bloomary. A forge for making wrought-iron, usually direct from the ore. The sides are iron plates, the hair-plate at the back, the cinder-plate at the front, the tuyere-plate (through which the tuyere passes) at one side (its upper part being called in some bloomaries the merrit-plate) the fore-spar plate opposite the tuyere-plate (its upper part being the skew-plate) and the bottom-plate at the bottom.

Blossom. The oxidized or decomposed outerop of a vein or coalbed, more frequently the latter. Also called *smut* and *tailing*. See Gossan.

Blow. A single heat or operation of the Bessemer converter.

Blower, Newc. 1. A strong discharge of gas from a fissure. 2. A fan or other apparatus for forcing air into a furnace or mine.

Blow-george. A hand-fan.

Blow-in. To put a blast furnace in operation.

Blow-out. 1. To put a blust furnace out of blast, by ceasing to charge fresh materials, and continuing the blast until the contents of the furnace have been smelted. 2. A large outcrop, beneath which the vein is smaller, is called a blow-out. 3. A shot or blast is said to blow out when it goes off like a gun and does not shatter the rock.

Blowpipe. A tube through which air is forced into a flame, to direct it and increase its intensity. In the compound blowpipe, two jets of gas (one of which may be air) are united at the point of combustion.

Blue-billy, Eng. The residuum of cupreous pyrites after roasting with salt.

Blue-john, Derb. Fluorspar.

Blue lead. (Pronounced like the verb to lead.) The bluish auriferous gravel and cement deposit found in the ancient river-channels of California.

Blue metal. See Metal.

Blue peach, Corn. A slate-blue, very fine-grained schorl-rock.

Blue stone. Copper-vitriol; copper-sulphate.

Boards. The first set of excavations in post-and-stall work.

Boat level, Wales. A navigable adit.

Bob, Corn. A triangular frame, by means of which the horizontal motion imparted from an engine is transformed into a vertical motion of the pump-rods in a shaft.

Bob-station. See Station.

Bog-iron ore. A loose, earthy brown hematite, of recent origin, formed in swampy ground.

Boiling. See Puddling,

Bonanza, Sp. Literally, fair weather. In miners' phrase, good luck, or a body of rich ore. A mine is in bonanza when it is profitably producing ore.

Bone. The slaty matter intercalated in coal-seams.

Bonnet. A covering over a cage to shield it from objects falling down the shaft.

Bonney, Corn. An isolated body of ore.

Booming. The accumulation and sudden discharge of a quantity of water (in placer mining, where water is scarce). See, also, Hushing.

Boot. A leather or tin joint connecting the blast-main with the tuyère or nozzle in a bloomary.

Bord, Newc. A passage or breast, driven up the slope of the coal from the gangway, and hence across the grain of the coal.

Bord. See Boards, Breast, and Post-and-stall.

Board-and-pillar. See Post-and-stall.

Borer. See Drill.

Borrasca, Sp. The converse of bonanza. Barren rock.

Bort. Opaque black diamond.

Bosh. 1. A trough in which bloomary tools (or, in copper-smelting, hot ingots) are cooled. 2. (Or, Boshes.) The portion of a shaft furnace in which it widens from above the hearth up to its maximum diameter.

Bottom-lift. The deepest lift of a mining-pump, or the lowest pump.

Bottomer, Eng. The man stationed at the bottom of a shaft in charge of the proper loading of cages, signals for hoisting, etc.

Bottoms, Corn. 1. The deepest workings. 2. In copper-smelting, the impure metallic copper, or cupriferous alloy, which separates

from the matt, and is found below it, when there is not enough sul-

phur present to retain in combination all the copper.

Boulder or Bowlder. A fragment of rock brought by natural means from a distance (though this notion of transportation from a distance is not always, in later usage, involved) and usually large and rounded in shape. Cobble stones taken from river-beds are, in some American localities, called boulders.

Bounds, Corn. A tract of tin-ore ground.

Bout, DERB. A measure of lead-ore; twenty-four dishes.

Bowke, S. Staff. A small wooden box in which iron-ore is hauled underground.

Bowse or Bouze, DERB. Lead-ore as cut from the lode.

Box-bill. A tool used in deep boring for slipping over and recovering broken rods.

Box-groove. A closed groove between two rolls, formed by a collar on one roll, fitting between collars on another roll.

Box-timbering. See Plank timbering.

Brace, CORN. The mouth of a shaft.

Brace-head. A cross-attachment at the top of the column of rods in deep boring, by means of which the rods and bit are turned after each drop.

Brace-key. See Brace-head.

Braize, U. S. Charcoal-dust. See Breeze.

Brake-sieve. A jigger, operated by a hand-lever.

Brakesman. The man in charge of a winding-engine.

Brances. See Brasses.

Branch. CORN. A small vein departing from the main lode, and in some cases returning.

Basque. A lining for crucibles or furnaces; generally a compound of clay, etc., with charcoal-dust.

Brass. An allow of eopper and zinc.

Brasses, Eng. and Wales. Pyrites (sulphide of iron) in coal.

Brat, Eng. and Wales. A thin bed of coal mixed with pyrites or carbonate of lime.

Brattice, Eng., Scot., and Wales. A plank lining, or a longitudinal partition of wood, brick, or even cloth, in a shaft, level, or gangway, generally to aid ventilation.

Brazil. Iron pyrites.

Breaker. See Coal-breaker and Rock-breaker.

Breast. 1. The face of a working. 2. In coal mines, the chamber driven upwards from the gangway, on the seam, between pillars of coal left standing, for the extraction of coal. 3. That side of the hearth of a shaft-furnace which contains the metal-notch.

Breast-boards. Planking placed between the last set of timbers and the face of a gangway or heading which is in quicksand or loose ground.

Breccia. A conglomerate in which the fragments are angular.

Breeding-fire. See Gob-fire.

Breeze, Eng. Small coke. Probably connected, perhaps interchangeable, with Braize, and both with the Fr. Braise.

Brettis, Derb. A crib of timber filled up with slack or waste. Brettis-way. A road in a coal-mine, supported by brettises built on each side after the coal has been worked out.

Bridge. See Reverberatory furnace.

Bridle-chains. Safety-chains to support a cage if the link between the cage and rope should break.

Brightening. See Blick.

Broaching-bit. A tool used to restore the dimensions of a borehole which has been contracted by the swelling of the marl or elay walls.

Brob. A peculiar spike, driven alongside the end of an abutting timber to prevent its slipping.

Broil or Broyl, Corn. See Bryle.

Broken coal, Penn. See Coal.

Bronze. An alloy of copper and tin.

Brood, CORN. The heavier kinds of waste in tin and copper ores.

Brown coal. See Coal.

surface.

Browse. Ore imperfectly smelted, mixed with einder and clay.

Brückner cylinder, PAC. A form of revolving roasting furnace. Bryle, CORN. The traces of a vein, in loose matter, on or near the

Bucker, Derb. A flat piece of iron with a wooden handle, used for breaking ore.

Bucket. The piston of a lifting-pump.

Bucking, Derb. See Cobbing. The bucking-hammer or bucking-iron is a broad-headed hammer used for this purpose; and the ore is broken on a flat piece of iron (bucking-plate).

Buckshot-cinder. Cinder from the iron blast-furnace, containing grains of iron.

Buckwheat-coal, Penn. See Coal.

Buddle, Corn. An inclined vat or stationary or revolving platform upon which ore is concentrated by means of running water.

Strictly the buddle is a shallow vat, not a platform or table; at least not in some localities. But general usage, particularly on the Pacific slope, makes no distinction.

Buggy. A small mine-wagon holding $\frac{1}{2}$ ton to 1 ton of coal.

Buhrstone. A quartz rock containing cellules.

Buitron, Sp. A furnace of peculiar construction, in which silver ore is reduced.

Bulkhead. 1. A tight partition or stopping in a mine for protection against water, fire, or gas. 2. The end of a flume, whence water is carried in iron pipes to hydraulic workings.

Bull. See Clay-iron.

Bulldog. 1. A refractory material used as furnace-lining, got by calcining mill-cinder, and containing silica and ferric oxide. 2. Penn. See Buckshot-cinder.

Bullfrog. See Barney.

Bullion. Uncoined gold and silver. Base bullion (PAC.), is pig lead containing silver and some gold, which are separated by refining.

Bull-pump, CORN. A direct single-acting pump, the steam cylinder of which is placed over the top of a shaft or slope, and the piston-rod attached to the pump-rods. The steam lifts piston and pump-rods, and the weight of these makes the down-stroke.

Bull-wheel. In rope-boring, a wheel on which is wound the rope for hoisting the bit, etc.

Bully. A pattern of miners' hammer, varying from "broad-bully" to "narrow-bully."

Bunch of ore, Corn. An ore-body, usually a small one.

Bunding. A staging of boards on stulls or stemples, to carry deads. See stull-covering.

Buntons, Eng. Battens or seantlings placed horizontally across a shaft, to which are nailed the boards forming the cleuding or sheathing of a brattice.

Burden, Corn. 1. The tops or heads of stream-work, which lie over the stream of tin. 2. The proportion of ore and flux to fuel in the charge of a blast-furnace.

Burning. See Calcining.

Burnt iron. 1. Iron which by long exposure to heat has suffered a change of structure and become brittle. It can be restored by eareful forging at welding-heat. 2. In the Bessemer and openhearth processes, iron which has been exposed to oxidation until all its earbon is gone, and oxide of iron has been formed in the mass.

Burr. Solid rock.

Burrow, CORN. A heap of refuse.

Buscones, Sp. Searchers; explorers.

Bushel. The Imperial bushel, of 2218 cubic inches, and the Winchester bushel, of 2150 cubic inches, are divided into 4 pecks. The bushel used in measuring charcoal and coal contains 5 pecks, or 2680 cubic inches, being 20 pounds or less of charcoal, and, in various localities, 80, 76, or 72 pounds of coal.

Bustamente furnace. A cylindrical shaft-furnace for roasting quicksilver ores; divided by perforated arches into two compartments, of which the upper receives the ore and the lower the fuel. The mercury-vapors are condensed in aludeln.

Butt, Eng. Of coal; a surface exposed at right angles to the face. See End.

Button. The globule of metal remaining on an assay-cupel or in a crucible, at the end of the fusion.

Butty, Derb. and Staff. A miner by contract at so much per ton of coal or ore.

Cabbling. Breaking up pieces of flat iron to be piled or fagoted, heated and rolled.

Cable-tools. The apparatus used in drilling deep holes, such as artesian wells, with a rope, instead of rods, to connect the drill with the machine on the surface.

Cache, Fr. The place where provisions, ammunition, etc., are cached or hidden by trappers or prospectors in unsettled regions.

Cage. 1. A frame with one or more platforms for ears, used in hoisting in a vertical shaft. It is steadied by guides on the sides of the shaft. 2. A structure of elastic iron rods slipped into the borehole in rod-boring to prevent vibration of the rods. 3. The barrel or drum in a whim on which the rope is wound.

Cake-copper. See Tough cake.

Caking coal. See Coal.

Cala, Sp. A small pit or experimental hole.

Cal, Corn. Wolfram.

Calcine. To expose to heat, with or without oxidation; to roast. Applied to ores for the removal of water and sulphur, and the disintegration of the mass; to limestone for the expulsion of its carbonic acid; etc.

Calciner. A furnace or kiln for roasting.

Calicata, Sp. A digging or trial pit.

Campaign. The period during which a furnace is continuously in operation.

Cañada, Sp. A ravine, or small cañon.

Canch. A part of a bed of stone worked by quarrying.

Cand or Cann, Corn. Fluorspar.

Cank, DERB. See Whinstone.

Cañon, Sp. A valley, usually precipitous; a gorge.

Cannel coal. See Coal.

Cap or Cap-rock. Barren vein matter, or a pinch in a vein, supposed to overlie ore.

Capel. A composite stone of quartz, schorl, and hornblende.

Capella, Sp. Cupelling furnace.

Captain, CORN. and WALES. The official in immediate charge of the work in a mine.

Carat. 1. A unit employed in weighing diamonds, and equal to 3½ troy grains. A carat-grain is one-fourth of a carat. 2. A term employed to distinguish the fineness of a gold alloy, and meaning one-twenty-fourth. Fine gold is 24-carat gold. Goldsmiths' standard is 22 carats fine, i. e., contains 22 parts gold, 1 copper, and 1 silver.

Carbona, Corn. An irregular deposit or impregnation of tin ore, found in connection with a tin lode.

Carbonaceous. Containing carbon not oxidized.

Carbonates. The common term in the West for ores containing a considerable proportion of carbonate of lead. They are sometimes earthy or ochreous (soft carbonates), sometimes granular and comparatively free from iron (sand carbonates), and sometimes compact (hard carbonates.) Often they are rich in silver.

Carbonization. The process of converting to carbon, by removing other ingredients, a substance containing carbon, as in the charring of wood or the natural formation of anthracite.

Carburization. The process of imparting carbon, as in making cement steel.

Carga, Sp. A mule-load of 300 pounds avoirdupois.

Carinthian furnace. A small reverberatory with inclined hearth, in which lead ore is treated by roasting and reaction, wood being the usual fuel.

Car-wheel iron. See Chill.

Case. A small fissure, admitting water into the workings.

Case-harden. To convert iron superficially into steel by partial cementation.

Cusing, Corn. 1. A partition or brattice, made of casing-plank, in a shaft. 2. PAC. Casings are zones of material altered by veinaction, and lying between the unaltered country rock and the vein.

Cast-after-cast, Corn. The throwing up of ore from one platform to another successively. See Shambles.

Cast-house. The building in which pigs or ingots are cast.

Casting. Pouring or drawing fused metal from a blast furnace, cupola, crucible, converter, or ladle into moulds.

Cast-iron. See Iron.

Cast-steel. See Steel.

Cata, Sp. A mine denounced, but unworked.

Catalan forge. A forge with a tuyere for reducing iron ore, with charcoal, to a loup of wrought iron; a bloomary. See Champlain forge.

Cat-head. 1. A small capstan. 2. A broad-bully hammer. See Bully.

Cauf, Newc. See Corf.

Caunter-lode, Corn. A vein coursing at a considerable angle to neighboring veins.

Caving. The falling in of the sides or top of excavations.

Cawk. Sulphate of baryta (heavy spar).

Cazo, Sp. A caldron in which amalgamation is effected by the cazo process, used in Mexico and South America.

Cement, Austr. and Pac. Gravel firmly held in a silicious matrix, or the matrix itself.

Cementation. The process of producing a chemical change in a solid substance by packing it in a powder and heating it. See Cement-steel and Malleable castings.

Cement-copper. Copper precipitated from solution.

Cement-gold. Gold precipitated in fine particles from solution.

Cement-silver. Silver precipitated from solution, usually by copper.

Cement-steel. See Steel.

Cendrada, Sp. Ashes or smeltings found at the bottom of a furnace, and valuable for use in other smeltings.

Cerro, Sp. A hill or mountain.

Chacing. Following a vein by its range or direction.

Chafery. A forge fire for reheating. (From the Fr. Chaufferie.) Chaldron. Thirty-six bushels. In Newcastle fifty-three hundredweight avoirdupois. Chaldron-wagons, containing this quantity, convey the coal from the pit to the place of shipment.

Chalybeate. Impregnated with iron (applied to mineral waters). Chamber. See Breast.

Champion lode. The main vein as distinguished from branches. Champlain forge or American forge. A forge for the direct production of wrought iron, generally used in the United States instead of the Catalan forge, from which it differs in using only finely-crushed ore and in working continuously.

Changing-house, Corn. A room where miners change and dry their underground clothing. See Dry.

Charbon roux, Fr. Brown charcoal, produced by an incomplete carbonization of wood.

Charge. 1. The materials introduced at one time or one round into a furnace. 2. The amount of explosive used for one blast.

Charger, Corn. An auger-like implement for charging horizontal bore-holes for blasting.

Charring. The expulsion by heat of the volatile constituents of wood, etc., leaving more or less pure vegetable carbon.

Chartermaster, S. Staff. See Butty.

Chats, NORTHUMB. Small pieces of stone with orc.

Cheeks. 1. The sides or walls of a vein. 2. Extensions of the sides of the eye of a hammer or pick.

Chenot process. The process of making iron-sponge from ore mixed with coal-dust, and heated in vertical cylindrical retorts.

Chert. Hornstone; a silicious stone often found in limestone.

Cherry coal, Eng. See Coal.

Chestnut coal, PENN. See Coal.

Chilian Mill. An improved arrastre, in which a heavy stone wheel is rolled around the bed.

Chill. An iron mould or portion of a mould, serving to cool rapidly, and so to harden, the surface of molten iron which comes in contact with it. Iron which can be thus hardened to a considerable depth is chilling iron, and is specially used for east-iron railway carwheels requiring hardness at the rim without loss of strength in the wheel.

Chimming, CORN. See Tossing.

Chimney. An ore-shoot. See Chute.

China clay. Kaolin.

Chisel. See Bit.

Chock. See Nog.

Choke-damp, Eng. Carbonic acid gas.

Chlorides, PAC. A common term for ores containing chloride of silver.

Chloridize. To convert into chloride. Applied to the roasting of silver ores with salt, preparatory to amalgamation.

Chlorination process. The process first introduced by Plattner, in which auriferous ores are first roasted to oxidize the base metals, then saturated with chlorine gas, and finally treated with water, which removes the soluble terchloride of gold, to be subsequently precipitated and melted into bars.

Chrome ore. Chromic iron (chromite, oxide of chromium and oxide of iron).

Chute. (Sometimes written shoot.) 1. A channel or shaft underground, or an inclined trough above ground, through which ore falls or is "shot" by gravity from a higher to a lower level. 2. A body of ore, usually of elongated form, extending downward within a vein (ore-shoot). The two forms of orthography of this word are of French and English origin respectively. Under chute, the original idea is that of falling; under shoot, that of shooting or branching. Both are appropriate to the technical significations of the word. An ore-shoot, for instance, may be considered as a branch of the general mass of the ore in a deposit, or as a pitch or fall of ore (Germ. Erzfall). In England the orthography shoot is, I believe, exclusively employed, and this is perhaps the best, the other being unnecessarily foreign.

Cinder, Eng. Slag, particularly from iron blast furnaces.

Cinder-pig, Eng. See Pig iron.

Cinder-plate. See Bloomary.

Cinder-tap, Cinder-notch. The hole through which cinder is tapped from a furnace. See Lürmann front.

Cinnabar. Sulphuret of mercury.

Cistern, CORN. See Tank.

Clack, Corn. A pump-valve.

Clack-door, Corn. An opening into the valve-chamber of a pump.

Claggy, Newc. Adhesive. When the coal is tightly joined to

the roof, the mine is said to have a claggy top.

Claim, PAC. The portion of mining ground held under the Federal and local laws by one claimant or association, by virtue of one location and record.

Clanny lamp. The safety-lamp invented by Dr. Clanny.

Clay-iron. A tool for crowding clay into leaky bore-holes.

Cleading, Eng. See Buntons.

Clean-up. The operation of collecting all the valuable product of a given period or operation in a stamp mill, or in a hydraulic or placer mine.

Cleat. 1. A joint in coal or rock. 2. A strip of wood.

Cleavage. The property in a mineral, of splitting more easily and perfectly in some directions than in others. The planes of cleavage bear a relation to the crystal form of the mineral. The cleavage of rock-masses is more properly a jointing, unless it follows the planes of bedding.

Clinker. The product of the fusion of the earthy impurities (ash) of coal during its combustion.

Clinometer. A simple apparatus for measuring by means of a pendulum or spirit-level and circular scale, vertical angles, particularly dips.

Clod. Soft shale or slate, in coal mines, usually applied to a layer forming a bad roof.

Closed top. See Cup-and-cone.

Closed front. An arrangement of the blast-furnace without a fore-hearth.

Clotting. The sintering or semi-fusion of ores during roasting.

Coal (Eng. Coals). This term is now applied to stonecoal or pit-coal, that is, mineral coal, obtained by mining, as distinguished from charcoal. No scientific account of the nature and origin of eoal will be given here. The three principal classes recognized by common usage are anthracite (hard, black, composed, when pure, almost exclusively of carbon), bituminous or coking coal (brown or black, containing hydrocarbons), and lignite or brown coal (brown or black, generally showing a woody or a laminar structure, containing much water, and more recent, geologically speaking, than the other varieties). Semi-anthracites and semi-bituminous coals are gradations between anthracite and bituminous, based on the increasing percentage of volatile matters. Hydrogenous or gas coals are bituminous coals yielding the highest percentage of volatile matters. The English classification of bituminous coals distinguishes coking coal proper (splintering when heated, but subsequently fusing into a semi-pasty mass), cherry or soft coal (igniting readily and burning rapidly without splintering or fusion), splint, rough or hard coal (igniting with more difficulty but burning with a clear, hot fire), and cannel coal (the parrot coal of Scotland, compact, homogeneous, conchoidal in fracture, burning with clear, bright flame). The English call an-

thracite also stonecoal or culm, and speak of a semi-anthracite as steam-coal. Any coal advantageously used for generating steam is called a steam-coal in the United States. The solid carbon remaining after the expulsion of volatile matters from bituminous coal or lignite is called coke. Commercial coke, however, must have a certain coherence and strength; and the coals which furnish it in this condition are called coking coals. A peculiar bituminous coal of Indiana and Ohio, which breaks in blocks, and is used raw without coking, to some extent, as a blast-furnace fuel, is called block-coal. Anthracite is divided in the United States according to the color of the ash after burning, into white-ash, red-ash, and pink-ash coal. It is also classified for the market according to the size of the pieces (see Coal-breaker), as follows: Lump includes the largest lumps as they come from the mine. The other sizes pass over and through sieve-meshes of the size named, the figures signifying inches, and thus indicating roughly the average limit of diameter for the pieces in each size, viz.:

Steamboat,	through	7	over	4;
No. 1, Broken or grate,	through	4	over	$2\frac{3}{4}$ to $2\frac{1}{2}$;
No. 2, <i>Egg</i> ,	through	$2\frac{3}{4}$ to $2\frac{1}{2}$	over	$2\frac{1}{4}$ to 2;
No. 3, Large stove,	through	$2\frac{1}{4}$ to 2	over	$1\frac{7}{8}$ to $1\frac{1}{2}$;
No. 4, Small stove,	through	$1\frac{7}{8}$ to $1\frac{1}{2}$	over	$1\frac{1}{8}$ to 1;
No. 5, Chestnut,	through	$1\frac{1}{8}$ to 1	over	$\frac{5}{8}$ to $\frac{1}{2}$;
No. 6, <i>Pea</i> ,	through	$\frac{5}{8}$ to $\frac{1}{2}$	over	$\frac{3}{8}$ to $\frac{1}{4}$.

No. 7, Buckwheat, is rarely made, except when the coal is washed on the screens, and the chestnut and pea have the larger dimensions above given. It is the smallest size, and usually included in the dirt or culm.

Coal-breaker. A building containing the machinery for breaking coal with toothed rolls, sizing it with sieves, and cleaning it for market.

Coal-pipes, Newc. Very thin irregular layers of coal.

Cobalt-orcs. Cobalt-speiss (smaltine, chloanthite when niccoliferous, safflorite when ferriferous, an arsenide of cobalt with or without nickel or iron); cobalt glance and cobalt pyrites (smaltite and linnwite, sulphides of cobalt); cobalt bloom (erythrite, arseniate of cobalt).

Cobbing, Corn. Breaking ore to sort out its better portions. See Spall.

Cobble, Penn. An imperfectly puddled ball which goes to pieces in the squeezer.

Cobre ores. Copper ores from Cuba.

Cockle, CORN. See Schorl.

Cod, Newc. The bearing of an axle.

Coffer or Cofer, Derb. 1. To secure a shaft from leaking by ramming in clay behind the masonry or timbering. 2. (or Cover) Corn. See Mortar (2). 3. A rectangular plank frame, used in timbering levels.

Coffin, CORN. 1. An old open working. 2. The mode of open working by casting up ore and waste from one platform to another, and so to the surface.

Cog. To roll or bloom ingots.

Cogs. See Nogs; only cogs are not squared, but simply notched where they cross each other. The interior of a structure of this kind and the spaces between the timber are usually filled with gob. They are called also cobs, corncobs, etc.

Coil-drag. A tool to pick up pebbles, bits of iron, etc., from the bottom of a drill-hole.

Coke. The product remaining after the expulsion by heat of the volatile constituents of coal.

Coking coal. See Coal.

Cold-bed. A platform in a rolling-mill on which cold bars are stored.

Cold blast. Air forced into a furnace without being previously heated.

Cold-short. Brittle when cold. Applied chiefly to iron and steel. Collar. 1. See Cap. 2. The collar of a shaft is the horizontal timbering around the mouth.

Colliery. A coal mine.

Collom washer, LAKE SUP. A variety of jig.

Color, Sp. 1. Color. The shade or tint of the earth or rock which indicates ore. 2. A particle of metallic gold found in the prospector's pan after a sample of earth or crushed rock has been "panned out." Prospectors say, e. g., "The dirt gave me so many colors to the panful."

Colorados, Sp. Ores impregnated with oxide of iron, and in a state of decomposition. See Gossan.

Col-rake. A shovel used to stir lead-ores during washing.

Comb. The place, in a fissure which has been filled by successive depositions of mineral on the walls, where the two sets of layers thus deposited approach most nearly or meet, closing the fissure and exhibiting either a drusy central cavity, or an interlocking of crystals.

Combined carbon. That portion of the carbon in iron or steel which is not visible as graphite, and is supposed to be alloyed or chemically combined with the iron.

Compass. An instrument like the ordinary nautical or surveyor's compass, though sometimes otherwise marked, and having a *clinometer* attached. Also, a *dip-compass*, for tracing magnetic iron ore, having a needle hung to move in a vertical plane.

Concentration. The removal by mechanical means of the lighter and less valuable portions of ore.

Concentrator. An apparatus in which, by the aid of water or air and specific gravity, mechanical concentration of ores is performed.

Condenser. A vessel or chamber in which volatile products of roasting or smelting (e. g., mercury or zinc vapors) are reduced to solid form by cooling, or in which the fumes of furnaces, containing mechanically suspended as well as volatile metallic matters, are arrested.

Conglomerate. A rock consisting of fragments of other rocks (usually rounded) cemented together.

Consume. The chemical and mechanical loss of mercury in amalgamation.

Contact. The plane between two adjacent bodies of dissimilar rock. A contact-vein is a vein, and a contact-bed is a bed, lying, the former more or less closely, the latter absolutely, along a contact.

Continental process. See German process.

Converter. See Bessemer process.

Cope. 1. Derb. To contract to mine lead-ore by the dish, load, or other measure. 2. The upper part of a flask, separable from the lower part. See Drag.

Copper, Derb. One who contracts to raise lead-ore at a fixed rate. Copperas. Ferrous sulphate.

Copper-ores. Native copper; red copper-ore (cuprite, protoxide); green and blue malachite (malachite and azurite, carbonates); copper glance (chalcocite, sulphide); purple copper (variegated or peacock ore, bornite, sulphide of copper and iron); gray copper (fahl-ore, tetrahedrite, sulphantimonide of copper and other metals); yellow copper (copper-pyrites, chalcopyrite, sulphantimonide of copper and iron); copper-lead ore (bournonite, sulphantimonide of lead and copper); black copper-ore (an earthy and variable mixture of sulphide and oxide of copper).

Copper-plates, Austr. and PAC. The plates of amalgamated copper

over which the auriferous ore is allowed to flow from the stamp battery, and upon which the gold is caught as amalgam.

Copper-rain. Minute globules thrown up from the surface of molten copper, when it contains but little suboxide.

Copper-smoke. The gases from the calcination of sulphuretted copper-ores.

Corbond. An irregular mass or "dropper" from a lode.

Cordurié process. The refining of lead by conducting steam through it, while molten, to oxidize certain metallic impurities.

Core, Corn. A miner's underground working-time or shift.

Corf, Corve, or Cauf (the last incorrect). 1. Newc. A large basket used in hoisting coal; from the Germ. Korb. 2. A wooden frame to earry coal. 3. A sled or low wagon for the same purpose.

Cornish pump. A pump operated by rods attached to the beam of a single-acting, condensing beam-engine. The steam, pressing down the piston in the vertical steam-cylinder, lifts the pump-rods, and these subsequently descend by their own weight.

Coro-coro. A dressed product of copper-works in South America, consisting of grains of native copper mixed with pyrite, chalco-pyrite, mispickel, and earthy minerals.

Corroding-lead. Refined lead, sufficiently pure for the corroding process, by which white lead is manufactured.

Cost-book, Corn. A book used to keep accounts of mining enterprises carried on under the cost-book system, peculiar to Cornwall and Devon, and differing from both partnership and incorporation. It resembles the mining partnership system of the Pacific States.

Costeaning or Costeening, Corn. Discovering veins by pits and open cuts, run on the surface transversely to the supposed course of the veins.

Counter. 1. A cross-vein. 2. (Or counter-gangway.) A gangway driven obliquely upwards on a coal-seam from the main gangway until it cuts off the faces of the workings, and then continues parallel with the main gangway. The oblique portion is called the run.

Country, or country-rock, Corn. The rock traversed by or adjacent to an ore deposit.

Course. See Strike.

Course of ore. See Chute (2.).

Coursing. Conducting the air-current of a mine in different directions by means of doors and stoppings.

Cousin Jack. A common nickname for a Cornishman.

Covered-binding, Corn. See Plank-timbering.

Cow. A kind of self-acting brake for inclined planes; a trailer.

Cowl. See Water-barrel.

Cowper-Siemens stove. A hot-blast stove of firebriek on the regenerative-principle.

Coyoting, PAC. Mining in irregular openings or burrows, comparable to the holes of coyotes or prairie foxes.

Crab. A machine for moving heavy weights. Specially the engines employed for lowering into place the pumps, rods, pipes, etc., of Cornish pit-work.

Cradle, PAC. See Rocker.

Cramp. A pillar of rock or mineral left for support.

Cranch. Part of a vein left by old workers.

Craze or Creaze, CORN. The tin-ore which collects in the middle part of the buddle.

Creep, Newc. A rising of the floor of a gangway, occasioned by the weight of incumbent strata, in pillar workings. Also any slow movement of mining ground.

Cretaceous. 1. Chalky. 2. See Geological formations.

Crevet. A erucible.

Crevice, PAC. 1. A shallow fissure in the bed-rock under a gold placer, in which small but highly concentrated deposits of gold are found. 2. The fissure containing a vein.

Crib. 1. See Curb. 2. A structure composed of frames of timber laid horizontally upon one another, or of timbers built up as in the walls of a log-cabin. 3. A miner's luncheon.

Cribbing. Close timbering, as the lining of a shaft, or the construction of cribs of timber or timber and earth or rock, to support a roof.

Cribble. A sieve.

Crop. 1. CORN. See Crop-tin. 2. The basset or outerop of strata at the surface. 3. To leave coal at the bottom of a bed.

Cropping out. The rising of layers of rock to the surface. That part of a vein which appears above the surface is called the cropping or outcrop.

Crop-tin. The chief portion of tin-ore separated from waste in the principal dressing operation.

Cross-course, Corn. An intersecting (usually a barren) vein.

Cross-cut. A level driven across the course of a vein, or, in general, across the direction of the main workings (as to connect two parallel gangways), or across the "grain of coal."

Cross-heading. A heading driven across from one gangway or breast to another, usually for ventilation.

Cross-vein. An intersecting vein.

Crow or crow-foot. A tool with a side-claw, for grasping and recovering broken rods in deep bore-holes.

Crucible. 1. A melting pot. 2. The lower part of a shaft furnace, in which fusion is effected and the molten bath is contained.

Crush. 1. A squeeze, accompanied, perhaps, with more violent motion and effects. 2. A variety of fault in coal. See Fault (2).

Crusher. A machine for crushing ores.

Cry of tin. The peculiar crackling noise produced in bending a piece of metallic tin.

Culm. 1. Eng. Anthracite. 2. Penn. The waste or slack of the Pennsylvania anthracite mines, consisting of fine coal, more or less pure, and coal-dust and dirt.

Cup-and-cone. A machine for charging a shaft-furnace, consisting of an iron hopper with a large central opening, which is closed by a cone or bell, pulled up into it from below. In the annular space around this cone, the ore, fuel, etc., are placed; then the cone is lowered to drop the materials into the furnace; after which it is again raised to close the hole.

Cupellation. The treatment on a hearth or cupel (usually formed of bone-ash) of an alloy of lead, gold, and silver, by means of fusion and an air blast, which oxidizes the lead to litharge, and removes it in liquid form, or absorbs it in the cupel.

Cupola. A shaft-furnace with a blast, for remelting metals, preparatory to casting. Sometimes incorrectly pronounced and written Cupalo.

Curb. A timber frame, circular or square, wedged in a shaft to make a foundation for walling or tubbing, or to support, with or without other timbering, the walls of the shaft.

Curbing. See Cribbing.

Cut. 1. To intersect a vein or working. 2. To exeavate coal.

Dam. 1. To keep back water in a stream or mine by means of a dam or bulkhead. 2. S. STAFF. See Stopping and Bulkhead. 3. The wall of refractory material, forming the front of the fore-hearth of a blast furnace. It is built on the inside of a supporting iron plate (dam-plate). Iron is tapped through a hole in the dam, and einder through a notch in the top of the dam. See Lürmann front.

Damask. The etched or "watered" surface produced on polished (welded) steel by corrosion.

Damper. A valve in a flue or at the top of a chimney to regulate the draft.

Dam-plate. The plate upon the dam-stone or front stone of the bottom of a blast furnace.

Damp sheet, S. Staff. A large sheet, placed as a curtain or partition across a gate-road to stop and turn an air-current.

Dan, Newc. A truck or sled used in coal mines.

Danks puddler. A revolving mechanical puddler. See Puddling.

Dant, Newc. Soft, inferior coal; mineral charcoal.

Davy lamp. The safety lamp invented by Sir H. Davy.

Day, Wales. The surface of the ground over a mine. Daylevel. An adit. Day-water. Water from the surface.

Dead, Corn. 1. Unventilated. 2. As to a vein or piece of ground, unproductive.

Deadened mercury. See Floured.

Dead-plate. A nearly horizontal iron plate, at the mouth of the furnace, nnder a steam-boiler, on which the bituminous coal charges are laid to be partially coked before they are pushed upon the grate where their solid carbon is consumed. The gases evolved on the dead-plate pass over the grate and are burned.

Dead riches. See Base bullion.

Dead roasting. Roasting earried to the farthest practicable degree in the expulsion of sulphur.

Deads, Corn. The waste rock, packed in excavations from which ore or coal has been extracted.

Dead-work. Work that is not directly productive, though it may be necessary for exploration and future production.

Deal. Plank used in shaft and gallery construction.

Dean, Corn. The end of a level.

Débris, Fr. The fragments resulting from shattering or disintegration.

Deep, Corn. The lower portion of a vein; used in the phrase to the deep, i. e., downward upon the vein.

Denunciar, Sp. To denounce. To give information that a mine is forfeited for being insufficiently worked, or for a violation of some condition which imposes that penalty. This term is also applied to the giving notice of a discovery, for the purpose of registry.

Deposit. The term mineral deposit or ore-deposit is arbitrarily

used to designate a natural occurrence of a useful mineral or ore in extent and degree of concentration to invite exploitation.

Derrick. 1. See Whip. 2. The hoisting-tower over an artesian well-boring.

Descension-theory. The theory that the material in veins entered from above.

Desilverization. The process of separating silver from its alloys. Desuing, Corn. See Dissuing.

Desulphurization. The removal of sulphur from sulphuret ores.

Dial, CORN. See Compass. To dial a mine is to make a survey of it.

Diamond-drill. A form of rock-drill in which the work is done by abrasion instead of percussion, black diamonds (borts) being set in the head of the boring tool.

Diamond groove. A groove of V-section in a roll.

Die. A piece of hard iron, placed in a mortar to receive the blow of a stamp, or in a pan to receive the friction of the muller. Between the die and the stamp or muller the ore is crushed.

Dig, CORN. See Gouge.

Diggings. Applicable to all mineral deposits and mining camps, but in usage in the United States applied to placer-mining only.

Dike. A vein of igneous rock.

Dilluing or dillenghing, CORN. An operation performed in tindressing upon the slimes of a certain part of the process. It is like the operation of panning, only performed with a sieve having a close haireloth bottom, and in a kieve of water which receives the tailings of the process.

Diluvium. Sand, gravel, clay, etc., in superficial deposits. See Drift. According to some authors, alluvium is the effect of the ordinary, and diluvium of the extraordinary action of water. The latter term is now passing out of use as not precise, and more specific names for the different kinds of material are substituted.

Dinas brick. A refractory brick, almost entirely composed of silica from the Dinas "clay" in the Vale of Neath, England.

Dip. The inclination of a vein or stratum below the horizontal. The dip at any point is necessarily at right angles with the local strike, and its inclination is steeper than that of any other line drawn in the plane of the vein or stratum through that point.

Dipping-needle. See Compass.

Discovery, PAC. The first finding of the mineral deposit in place upon a mining claim. A discovery is necessary before the location

can be held by a valid title. The opening in which it is made is called discovery-shaft, discovery-tunnel, etc.

Dish, Corn. 1. The landowner's or landlord's part of the ore. 2. Derb. A measure of 14, 15, or 16 pints.

Dissuing, CORN. Cutting out the selvage or gouge of a lode, to facilitate the ore-extraction.

Distillation. Volatilization, followed by condensation to the liquid state.

District. In the States and Territories west of the Missouri, a vaguely bounded and temporary division and organization made by the inhabitants of a mining region. A district has one code of mining laws, and one recorder. Counties and county officers are gradually taking the place of these cruder arrangements.

Ditch. An artificial watercourse, flume, or canal, to convey water for mining. A flume is usually of wood; a ditch, of earth.

Divining-rod or Dowsing-rod, CORN. A rod (most frequently of witch-hazel, and forked in shape) used, according to an old but still extant superstition, for discovering mineral veins and springs of water, and even for locating oil wells.

Doggy, S. Staff. An underground superintendent, employed by the butty.

Dog-hole.. A small proving-hole or airway, usually less than 5 feet high.

Dole. A division of a parcel of ore.

Dolly-tub, Corn. A tub in which ore is washed, being agitated by a dolly, or perforated board.

Dopc. See Explosives.

Dotts or Dott-holes. Small openings in the vein.

Douglas process. See Hunt and Douglas process.

Downcast. The opening through which the ventilating air-current descends into a mine.

Downcome. The pipe through which tunnel-head gases from iron blast-furnaces are brought down to the hot-blast stoves and boilers, when these are below the tunnel-head.

Dradge, Corn. The inferior portions of ore, separated from the prill by cobbing.

Drag. The lower part of a flask. The mould having been prepared in the two parts of the flask, the cope is put upon the drag before easting. After easting, the flask is opened by removing the cope.

Drag-treist. A spiral hook at the end of a rod, for cleaning boreholes.

Draught, S. Staff. The quantity of coal raised to bank in a given time.

Draw. To *rob* pillars or the top-coal of breasts before abandoning the ground.

Dredge. Very fine mineral matter held in suspension in water.

Dresser, S. Staff. A large pick, with which the largest lumps of coal are prepared for loading into the skip.

Dressing, Corn. The picking and sorting of ores, and washing, preparatory to reduction.

Drift. 1. A horizontal passage underground. A drift follows the vein, as distinguished from a cross-cut, which intersects it, or a level or gallery, which may do either. 2. Unstratified diluvium.

Drill. A metallic tool for boring in hard material. The ordinary miner's drill is a bar of steel, with a chisel-shaped end, and is struck with a hammer. See Rock-drill, Diamond-drill.

Driving. Extending excavations horizontally. Distinguished from sinking and raising.

Dropper, CORN. A branch leaving the main vein on the footwall side.

Dross. The material skimmed from the surface of freshly melted, not perfectly pure metal.

Drowned level. See Blind level, (2).

Druggon, S. Staff. A square iron or wooden box, used for conveying fresh water for horses, etc., in a mine.

Drum. That part of the winding machinery on which the rope or chain is coiled.

Druse. A crystallized crust lining the sides of a cavity.

Dry, Corn. See Changing-house.

Dry copper. See Under-poled copper. Also copper just ready for poling.

Dry Puddling. See Puddling.

Dry sand. Sand prepared for moulds by thorough drying and baking. When special cohesion is required) as for cores) other substances, such as flour, molasses, etc., are mixed with it.

Dualin. See Explosives.

Dumb-drift. An air-way conveying air around, not through, a ventilating furnace to the upcast.

Dump. 1. To unload a vehicle by tilting or otherwise, without handling or shovelling out its contents. 2. A pile of ore or rock.

Dumper. A tilting-car used on dumps.

Durn, Corn. A frame of timbering, like a door-frame.

Dust-plate. A vertical iron plate, supporting the slag-runner of an iron blast furnace.

Dutch metal. An alloy of copper and zinc, containing more copper than ordinary brass.

Duty. A measure of the effectiveness of a steam-engine, usually expressed in the number of foot-pounds (or kilogrammetres) of useful work obtained from a given quantity of fuel.

Duty-ore, CORN. The landlord's share of the ore.

Dyke. See Dike.

Dzhu, Corn. To cut ahead on one side of a face, so as to increase the efficacy of blasting on the remainder. (Doubtless the same word as Dissue. See Dissuing.) Also called to hulk.

Egg-coal, Penn. See Coal.

Egg-hole, DERB. A notch cut in the wall of a lode to hold the end of a stempel.

Electrum. An alloy of copper, zinc, and nickel.

Eliquation. Separating an alloy by heating it so as to melt the more fusible of its ingredients, but not the less fusible.

Elutriation. Purification by washing and pouring off the lighter matter suspended in water, leaving the heavier portions behind.

Elvan, CORN. A name given to certain broad granite veins or belts in schistose rocks.

Emery. Impure corundum.

End of coal. The direction or section at right-angles to the face; sometimes called the butt.

End-pieces, Corn. See Wall-plates.

English process. In copper-smelting, the process of reduction in a reverberatory furnace, after roasting, if necessary.

English zine-furnace. A furnace in which zine is reduced and distilled from calcined ores in crucibles,

Eugorgement. The clogging of a furnace. See Scaffold.

Entry. An adit. Applied to the main gangway in some coal mines.

Estufa unalgamation, Sp. Λ modification of the patio process, using heat.

Exploder. A cap or fulminating cartridge, placed in a charge of gnnpowder or other explosive, and exploded by electricity or by a fuse. See Explosives.

Exploitation, Fr. The productive working of a mine, as distinguished from exploration.

Explosives. The principal explosives used in mining are gunpowder, a compound of sulphur, charcoal, and potassium nitrate (potash saltpetre) or sodium nitrate (Chili or soda-saltpetre); nitroglycerin, a liquid compound of carbon, hydrogen, nitrogen, and oxygen, produced by the action of nitric acid upon glycerin; dynamite No. 1, or giant-powder, a mixture of nitroglycerin with a dry pulverized mineral or vegetable absorbent or dope (commonly silicious or infusorial earth); dynamite No. 2, nitroglycerin mixed with saltpetre, sawdust, or coaldust, paraffin, etc., in lieu of an inexplosive dope; lithofracteur, nitroglycerin mixed with silicious earth, charcoal, sodium (and sometimes barium) nitrate and sulphur; dualin, nitroglycerin, mixed with potassium nitrate and fine sawdust; rend-rock, Hercules, Neptune, tonite, vigorite, and other powders, resembling dynamite No. 2, i. e., consisting of nitroglycerin with a more or less explosive dope; and mica-powder, a No. 1 dynamite, in which the dope is fine scales of mica. The chlorate, picrate, and fulminate explosives are not used in mining, except the fulminate of mercury, which is employed for the caps or exploders, by means of which charges of powder, dynamite, etc., are fired.

Eye. 1. The top of a shaft. 2. The opening at the end of a tuyere, opposite the nozzle. 3. The hole in a pick or hammer-head which receives the handle.

Face. 1. In any adit, tunnel, or stope, the end at which work is progressing or was last done. 2. The face of coal is the principal cleavage-plane at right angles to the stratification. Driving on the face is driving against or at right angles with the face.

Fagot. See Pile.

Fahlband, GERM. A zone or stratum in crystalline rock, impregnated with metallic sulphides. Intersecting fissure-veins are enriched by the fahlband.

Famp, Newc. Soft, tough, thin shale beds.

Fan. A revolving machine, to blow air into a mine (pressure-fan, blower), or to draw it out (suction-fan).

Fanega, Sp. A bushel; sometimes half a mule-load.

Fang, Derb. An air-course cut in the side of a shaft or level, or constructed of wood.

Fast-end. 1. The part of the coal-bed next the rock. 2. A gangway with rock on both sides. See Loose-end.

Fast shot, Newc. A charge of powder exploding without the desired effect.

Fathom, CORN. Six feet. A fathom of mining ground is six feet square by the whole thickness of the vein, or in Cornish phrase, a fathom forward by a fathom vertical.

Fauld. The tymp-arch or working-arch of a furnace.

Fathom-tale, Corn. See Tut-work (2). This name probably arises from the payment for such work by the space excavated, and not by the ore produced.

Fault. 1. A dislocation of the strata or the vein. 2. In coal-seams, sometimes applied to the coal rendered worthless by its condition in the seam (slate-fault, dirt-fault, etc.).

Feather. See Plug and feather.

Feathered-shot. Copper granulated by pouring into cold water.

Feathering. See Plugging.

Feeder. 1. A small vein joining a larger vein. 2. A spring or stream. 3. A blower of gas.

Feigh, NEWC. Refuse washed from lead-ore or coal.

Feldspathic. Containing feldspar as a principal ingredient.

Fell. See Riddle.

Ferrie furnace. A high iron blast furnace, in the upper part of which crude bituminous coal is converted into coke.

Ferromanganese. An alloy of iron and manganese.

Ferruginous. Containing iron.

Fettle, Fettling. See Fix.

Fillet. The rounded corner of a groove in a roll.

Fin. The thin sheet of metal squeezed out between the collars of the rolls in a roll-train.

Fine metal. 1. See Metal. 2. The iron or plate-metal produced in the refinery.

Finery. A charcoal-hearth for the conversion of cast into malleable iron.

Fining. 1. See Refining. 2. The conversion of cast into malleable iron in a hearth or charcoal-fire.

Finishing-rolls. The rolls of a train which receive the bar from the roughing-rolls, and reduce it to its finished shape.

Fire-bars. Grate-bars in a fireplace.

Fire-bricks. Refractory bricks of fire-elay or of silicious material used to line furnaces.

Fire-bridge. The separating low wall between the fire-place and the hearth of a reverberatory furnace.

Fire-clay. A clay comparatively free from iron and alkalies, not easily fusible, and hence used for fire-bricks. It is often found beneath coal-beds.

Fire-damp. Light carburetted hydrogen gas. When present in common air to the extent of one-fifteenth to one-thirteenth by volume, the mixture is explosive.

Fire-setting. The softening or cracking of the working-face of a lode, to facilitate excavation, by exposing it to the action of a wood-fire built close against it. Now nearly obsolete, but much used in hard rock before the introduction of explosives.

Fire-stink, S. Staff. The stench from decomposing iron pyrites, caused by the formation of sulphuretted hydrogen.

Fissure-vein. A fissure in the earth's crust filled with mineral.

Fix. To fettle or line with a fix or fettling, consisting of ores, serap and einder, or other suitable substances, the hearth of a puddling furnace.

Flang, Corn. A two-pointed miner's pick.

Flange. Applied to a vein widening.

Flap-door, Newc. A manhole door.

Flask. 1. The wooden or iron frame which holds the sand-mould used in a foundry. 2. An iron bottle in which quicksilver is sent to market. It contains $76\frac{1}{2}$ pounds.

Flat, Derb. and N. Wales. A horizontal vein or ore-deposit auxiliary to a main vein; also any horizontal portion of a vein elsewhere not horizontal.

Flat-nose shell. A cylindrical tool with valve at bottom, for boring through soft clav.

Flat-rods. A series of horizontal or inclined connecting-rods, running upon rollers, or supported at their joints by rocking-arms. to convey motion from a steam-engine or water-wheel to pump-rods at a distance.

Flat-wall, CORN. A local term (in St. Just) for foot-wall.

Flintshire furnace. A reverberatory with a depression, well or crucible in the middle of the side of the hearth; used for the roasting and reaction process on lead ores.

Float-copper, Lake Sup. Fine scales of metallic copper (especially produced by abrasion in stamping) which do not readily settle in water.

Float-gold, PAC. Fine particles of gold, which do not readily settle in water, and hence are liable to be lost in the ordinary stampmill process.

Float-ore. Water-worn particles of ore; fragments of vein-material found on the surface, away from the vein-outcrop.

Flookan or Flooking, Corn. See Fluccan.

Floor. 1. The rock underlying a stratified or nearly horizontal deposit, corresponding to the foot-wall of more steeply-dipping deposits. 2. A horizontal, flat ore-body. 3. A floor, in the ordinary sense, or a plank platform underground.

Floran-tin, Corn. Tin ore scarcely visible in the stone, or stamped very small.

Flosh, Corn. A rude mortar, with a shutter instead of a screen, used under stamps.

Floss. Fluid, vitreous einder, floating in a puddling furnace.

Floss-hole. A tap-hole.

Floured. The finely granulated condition of quicksilver, produced to a greater or less extent by its agitation during the amalgamation process.

Flowing furnace. A reverberatory with inclined hearth, used in Cornwall for treating roasted lead ores by the precipitation process.

Fluccan, Corn. Soft clayey matter in the vein; a vein or course of clay.

Flue. A passage for air, gas, or smoke.

Flue-bridge. The separating low wall between the flues and the laboratory of a reverberatory furnace.

Flue-cinder. Iron-cinder from the reheating furnace, so called because it runs out from the lower part of the flue.

Flume. A wooden conduit, bringing water to a mill or mine.

Flux. A salt or other mineral, added in smelting to assist fusion, by forming more fusible compounds.

Foal, Newc. A young boy employed in putting coal.

Fodder, NORTH Eng. A unit employed in expressing weights of metallic lead, and equal to 21 hundredweight of 112 pounds avoirdupois.

Foge, CORN. A forge for smelting tin.

Fondon. A large copper vessel, in which hot amalgamation is practiced.

Foot-piece. See Sill.

Foot-wall, CORN. The wall under the vein.

Foot-way. The series of ladders and sollars by which men enter or leave a mine.

Forefield, Newc. The face of the workings. The forefield-end is the end of the workings farthest advanced.

Fore-hearth. A projecting bay in the front of a blast-furnace hearth, under the tymp. In open-front furnaces it is from the fore-hearth that einder is tapped. See Dam and Tymp.

Forfeiture. The loss of possessory title to a mine or public lands by failure to comply with the laws prescribing the quantity of assessment work, or by actual abandonment.

Fore-poling. A method of securing drifts in progress through quicksand by driving ahead poles, lath, boards, slabs, etc., to prevent the inflow of the quicksand on the sides and top, the face being protected by breast-boards.

Forespar. See Bloomary.

Fore-winning, NEWC. Advanced workings.

Forge. 1. An open or semi-open hearth with a tuyere. 2. Eng. That part of an ironworks where balls are squeezed and hammered and then drawn out into puddle-bars by grooved rolls.

Forge-einder. The slag from a forge or bloomary.

Formation. See Geological formations.

Fork. 1. CORN. The bottom of the sump. 2. DERB. A piece of wood supporting the side of an excavation in soft ground.

Forpale or Forepale. The driving of timbers or planks horizontally ahead at the working-face, to prevent the caving of the ground in subsequent driving.

Fossil ore. Fossiliferous red hematite.

Fother, NEWC. One-third of a chaldron.

Foundershaft. The first shaft sunk.

Fox-tail, S. Walles. The last cinder obtained in the fining process.

Frame, CORN. See Tin-frame.

Free. Native, uncombined with other substances, as free gold or silver.

Free fall. An arrangement by which, in deep boring, the bit is allowed to fall freely to the bottom at each drop or down-stroke.

Free-milling. Applied to ores which contain free gold or silver, and can be reduced by crushing and amalgamation, without roasting or other chemical treatment.

Freiberg amalgamation. See Barrel amalgamation.

Fritting. The formation of a slag by heat with but incipient fusion.

Frontal hammer or Frontal helve, Eng. A forge-hammer lifted by a cam, acting upon a "tongue" immediately in front of the hammer-head.

Frue vanner. A variety of continuously working percussion-table.

Fulguration. See Blick.

Furgen. A round rod used for sounding a bloomary fire.

Furnace. 1. A structure in which heat is produced by the combustion of fuel. 2. A structure in which, with the aid of heat so produced, the operations of roasting, reduction, fusion, steam-generation, desiccation, etc., are carried on, or, as in some mines, the *upcast* air-current is heated, to facilitate its ascent and thus aid ventilation.

Furnace cadmium or cadmia. The oxide of zinc which accumulates in the chimneys of furnaces smelting zinciferous ores.

Furtherance, Newc. An extra price paid to hewers when they also put the coal.

Fuse. A tube or easing filled with combustible material, by means of which a blast is ignited and exploded.

Gad. 1. A steel wedge. 2. A small iron punch with a wooden handle used to break up ore.

Galemador, Sp. A small Mexican furnace for roasting silver ores.

Gale, Eng. (Forest of Dean.) A grant of mining ground.

Galiage. Royalty.

Gallery. A level or drift.

Gallery-furnace. A retort-furnace used in the distillation of mercury.

Gallows-frame. A frame over a shaft, carrying the pulleys for the hoisting cables.

Galvanize. To coat with zinc.

Ganister. A mixture of ground quartz and fire-clay, used in lining Bessemer converters.

Gang. 1. A mine. 2. A set of miners.

Gangue. The mineral associated with the ore in a vein.

Gangway. 1. A main level, applied chiefly to coal mines. 2. NEWC. A wooden bridge.

Garland, S. Staff. A trough or gutter round the inside of a shaft to catch the water running down the sides.

Gas-coal. See Coal.

Gas-furnace. A furnace employing gaseous fuel.

Gash. Applied to a vein wide above, narrow below, and terminating in depth within the formation it traverses.

Gas-producer. A furnace in which combustible gas is produced, to be used as fuel in another furnace.

Gas-well. A deep boring, from which natural gas is discharged.

Gate, Gate-way, or Gate-road, Eng. 1. A road or way underground for air, water, or general passage; a gangway. 2. The aperture in a founder's mould, through which the molten iron enters.

Gear, Newc. 1. The working tools of a miner. 2. The mechanical arrangements connecting a motor with its work.

Geode. A cavity, studded around with crystals or mineral matter, or a rounded stone containing such a cavity.

Geological formations. Groups of rocks of similar character and age are called formations. The different stratified formations have been arranged by geologists according to their apparent age or order of position stratigraphically, and the fossils they contain. While there are minor points of difference in classification, and still more in nomenclature, the general scheme is now well settled. Three tables are given below, the first prepared in 1878, by Professor J. D. Dana, the second by Professor T. Sterry Hunt, both for the United States, and the third, referring to formations found in Pennsylvania only, by Professor J. P. Lesley. They are taken (Professor Hunt's, with later revision by the author), from The Geologist's Travelling Handbook, prepared by James Macfarlane, Ph.D. The numbers attached to the different formations in these tables will facilitate the identification of a given formation under different names. A catalogue of the formations is added to the tables, in which the predominant rocks of each are named. The eruptive rocks are not included in these tables, the determination of their age being a more difficult and doubtful matter, the discussion of which cannot be undertaken in this place. For lack of space, also, the enumeration and description of the different species of rocks and minerals must be omitted, the reader being referred for such information to works on lithology and mineralogy. (See next page.)

Geordie. The miners' term for Stephenson's safety-lamp.

German process. In copper smelting, the process of reduction in a shaft-furnace, after roasting, if necessary.

German silver. A white alloy of nickel, copper, and zinc.

German steel. See Steel.

Gerstenhöfer furnace. A shaft-furnace filled with terraces or shelves, through which crushed ore is caused to fall, for roasting.

Gig. See Kibble.

Gin. See Whim.

PROFESSOR J. D. DANA'S TABLE OF GEOLOGICAL FORMATIONS.

SYSTEMS OR AGES.		GROUPS OR PERIODS.	FORMATIONS OR EPOCHS.
Age of man.		20. Quaternary.	20. Quaternary.
Age of mammals,		19. Tertiary.	19 c. Pliocene. 19 b. Miocene. 19 a. Eocene.
Reptilian age.		18. Cretaceous.	18 c. Upper Cretaceous. 18 b. Middle Cretaceous. 18 a. Lower Cretaceous.
		17. Jurassic.	17. Jurassic.
Rel		16. Triassic.	16. Triassic.
us.		15. Permian.	15. Permian.
Carboniferous		14. Carboniferous.	14 c. Upper Coal Measures. 14 b. Lower Coal Measures. 14 a. Millstone Grit.
Carl		13. Subcarboniferous.	13 b. Upper Subcarboniferous. 13 a. Lower Subcarboniferous.
hes,		12. Catskill.	12. Catskill.
of fig.		11. Chemung.	11 b. Chemung. 11 a. Portage.
Devoniau or age of fishes.		10. Hamilton	10 c. Genesee. 10 b. Hamilton. 10 a. Marcellus.
Devonia		9. Corniferous.	9 c. Corniferous. 9 b. Schoharie. 9 a. Cauda Galli.
	'n	8. Oriskany.	8. Oriskany.
SÇ EZ	uria	7. Lower Helderberg.	7. Lower Helderberg.
RATI	Sil	6. Salina.	6. Salina.
SILURIAN OR AGE OF INVERTEBRATES	Upper Silurian.	5. Niagara.	5 c. Niagara. 5 b. Clinton. 5 a. Medina.
	i.	4. Trenton.	4 c. Cincinnati. 4 b. Utica. 4 a. Trenton.
AN OR	Lower Silurian.	3. Canadian.	3 c. Chazy. 3 b. Quebec. 3 a. Calciferous.
ILURI		2. Primordial or Cambrian.	2 b. Potsdam. 2 a. Acadian.
Ji.		1. Archæan,	1 b. Huronian. 1 a. Laurentian.

PROFESSOR T. STERRY HUNT'S TABLE OF GEOLOGICAL FORMATIONS.

AGES.	GROUPS.	AMERICAN FORMATIONS.
Cenozoic.	20. Quaternary. 19. Tertiary.	20. Recent. 19 c. Pliocene. 19 b. Miocenc. 19 a. Eocene.
Mesozoic.	18. Cretaceous. 17. Jurassic. 16. Triassic.	18. Cretaceous. 17. New Red Sandstone. 16. New Red Sandstone.
Paleozoic.	13-15. Carboniferous.	15. Permo-Carboniferous. 14. Coal Measures. 13 b. Mississippi (Carb.Limestone 13 a. Waverley or Bonaventure.
	8-12. Erian or Devonian.	12. Catskill. 11. Chemung and Portage. 10. Hamilton (including Genese and Marcellus). 9. Corniferous or Upper Helderh 8. Oriskany.
	5-7. Silurian.	7. Lower Helderberg. 6. Onondaga or Salina. 5 c. Niagara (including Guelph). 5 b. Clinton. 5 a. Medina. 5 a. Oneida.
	4. Upper Cambrian, Siluro-Cambrian, Ordovician, or Ordovian.	4 c. Loraine. 4 b. Utica. 4 a. Trenton.
	3. Middle Cambrian.	3 c. Chazy. 3 b. Levis (Tremadoc and Arenig 3 a. Calciferous.
	2. Lower Cambrian.	2 e, Potsdam. 2 d. Sillery. 2 c, Acadian (Menevian). 2 b. Taconian. 2 a. Keweenian.
Eozoic.	1. Primary or Crystalline.	1 e Montalban. 1 d. Norian or Labrador.* 1 c. Huronian. 1 b. Arvonian. 1 a. Laurentian.

PROFESSOR J. P. LESLEY'S PROVISIONAL NOMENCLATURE OF THE SECOND GEOLOGICAL SURVEY OF PENNSYLVANIA.

0	NAMES PROVISIONALLY ADOPTED.	Numbers used in first survey.
	20. Quaternary. 16. Triassic. 14 c. Upper Barren Measures. 14 c. Monongahela River Coal Series. 14 b. Lower Barren Measures. 14 b. Allegheny River Coal Series. 14 a. Pottsville Conglomerate.	XIII. XIII. XIII. XIII. XIII.
Bernician.	13 b. Mauch Chunk Red Shale. (Umbral.) 13 a. Pocono Gray Sandstone. (Vespertine.)	XI. X.
Devonian.	12. Catskill Red Sandstone. (Ponent.) 11 b. Chemung. 11 a. Portage. 10 e. Genesee. 10 b. Hamilton. 10 a. Marcellus. 9. Upper Helderberg. 8. Oriskany.	IX. VIII. VIII. VIII. VIII. VIII. VIII. VIII. VIII. VIII.
Silurian.	7. Lower Helderberg. (Lewistown Limestone.) 5 b. Clinton. 5 a. Medina. 5 a. Oneida.	VI. V. IV. IV.
Siluro-Cambrian.	4 c. Hudson River. 4 b. Utica. 4 a. Trenton. 3 a. Calciferous. 2 b. Potsdam.	III. III. II. II. II.
	1. Azoic.	

Notes.—In the following notes Professor Hunt's classification is sufficiently followed to show the nature of the older groups which he distinguishes.

1a. Laurentian. Chiefly massive gneiss, reddish or grayish, sparingly micaceous, often hornblendic. Some crystalline limestone, magnetic iron, and other metallic ores.

1b. Arvonian. Chiefly petrosilex, often becoming quartziferous prophyry, with some quartzites and hornblendic rocks; magnetic and specular iron ores.

1c. Norian. Chiefly a feldspathic rock (norite), which sometimes carries garnet, epidote, etc.; also, great beds of titaniferous iron ore.

ld. Huronian. Chloritic schists, greenstone (diorite or diabase), serpentine, steatite, dolomite, copper, chrome, nickel, and iron ores.

1e. Montalban. Fine-grained micaceous or hornblendic gneiss, chrysolite rock, serpentine, mica-schist, granite.

2a. Keweenian. The copper-bearing series of Lake Superior, made up of sandstones and conglomerates, with much interstratified cruptive rock.

2b. Taconian. Granular quartities, argillites and nacreous or hydro-micaceous schists and great masses of crystalline limestone, marbles, magnetite, siderite, and pyrite changing to limonite.

2c and : d. Acadran (and Sillery). Fossiliferous sandstone and shale.

2e. Potsdam. Sandstone, conglomerate.

- 3a. Calciferous. Sandy magnesian limestone, calcarcous sandstone.
- 3b. Quebec. Sandstone, limestone conglomerate, black slate
- 3c. Chazy. Limestone, chert.
- 4a Trenton. Limestone, buff and blue; dolomite carrying lead ore deposits; brown-bematite beds.
 - 4b. Utica. Dark carbonaecous slate; impure limestone.
 - 4c. Hudson River. Slate, shale, clay, grit.
 - 5a. Medina. Conglomerate; argillaccous sandstone.
- 5b. Clinton. Sandstone, shale, conglomerate, limestone, fossiliferous red hematite, or oolitic iron-ore bed.
 - 5c. Niagara. Clay shale; limestone.
 - 6. Salina. Red shale, gypscous shale, hydraulic lime, salt.
 - 7. Lower Helderberg. Limestone, shaly or compact, and fossiliferous.
 - 8. Oriskany. Sandstone.
 - 9. Corniferous or Upper Helderberg. Principally limestone.
- 9a. Cauda-galli. Fine-grained calcareous and argillaceous, drab or brownish sandstone; peculiar fossils.
- 9b. Schoharie Grit. Fine-grained calcareous grit, similar to 9a, but with differing fossils.
- 9c. Onendaga, and 9d. Corniferous. Gray, blue, black limestone. At the top of 9d occur the Marcellus iron ores (carbonate).
- 10a. Marcellus. Black or dark-brown bituminous and pyritiferous shales. In 10a and 9d occur the petroleum deposits of Canada.
 - 10b. Hamilton. Slate, shale, sandstone, calcareou- and argillaceous.
 - 10b. Tully. Impure dark limestone.
 - 10e. Genesee Black clay slate.
 - 11a. Portage. Green and black sandy and slaty shales, sandstone, flagstone.
- 11b. Chemung. Thin-bedded greenish sandstones and flagstones, with intervening shales, and rarely beds of impure limestone.
- 12. Catskill. Red, gray sandstone, grindstone grit, greenish shale, conglomerate.
 - 13a. Lower Subcarboniferous. Sandstone, limestone, small local coal beds.
- 13b. Upper Subcarboniferous. Red shale, red and gray sandstone, blue lime-stone.
- 14a. Millstone grit. White or yellow sandstone, and conglomerate of quartz pebbles.
- 14b. and 14c. Coal measures. Fire-clay, shale, sandstone, conglomerate, lime-stone, bituminous coal, authracite, iron ore, salt.
 - 15. Permian. Limestone, sandstone, marl, shale.
- 16. Triassic. Red sandstone, red shale, conglomerate, lignite, trap dikes, copper ore, coal.
- 17. Jurassic. Marl, limestone, probably the gold-bearing slates of Cali-
 - 18. Cretaceous. Earthy beds of sand, marl, clay, limestone, chalk, lignite.
 - 19. Tertiary. Earthy sand, clay, marl, limestone, sandstone.
- 20. Quaternary. Sand, pebbles, boulders, clay, diluvium, alluvium; gravel and placer tin and gold deposits.

NOTE.—The primary and crystalline schistose rocks contain the larger number of mineral veins. The ancient magnesian limestones (probably Devonian) are characterized in many localities by deposits of argentiferous lead ore and of zinc ore.

Ginging, DERB. The lining of a shaft with masonry.

Giraffe. A car of peculiar construction to run on an incline.

Girdle. A thin bed of stone.

Girdle, NEWC. A thin stratum of stone.

Girth. In square-set timbering, a horizontal brace in the direction of the drift.

Glazy. See Iron.

Glist, CORN. Mica.

Glut, Newc. A piece of wood, used to fill up behind cribbing or tubbing.

Goaf, Eng. An excavated space; also, the waste rock packed in old workings.

Goaves. Old workings.

Gob, S. Wales. See Goaf. Both terms are chiefly used in collieries, and are apparently the same word. Local usage seems to give to goaf rather the meaning of the space in which the roof has fallen after the pillars have been removed, and to gob that of a space packed with waste after long-wall extraction of the coal.

Gobbing. Packing with waste rock. See Stowiny.

Gob-up, Eng. Of a blast furnace, to become obstructed in working by reason of a scaffold or a salamander.

Gob-fire. Fire produced by the heat of decomposing gob. Goffan or Goffen, Corn. A long narrow surface-working.

Gold-ores. Native gold; telluric gold ore (sylvanite, müllerite, nagyagite, tellurides of gold, silver, and lead); auriferous lead, zinc, and copper ores.

Good levels, Corn. Levels nearly horizontal.

Good roasting. See Roasting.

Gopher or Gopher-drift. An irregular prospecting-drift, following or seeking the ore without regard to maintenance of a regular grade or section.

Gossan or Gozzan, CORN. Hydrated exide of iron, usually found at the decomposed outcrop of a mineral vein.

Gothic groove. A groove of Gothic arch section in a roll.

Gouge. A layer of soft material along the wall of a vein, favoring the miner, by enabling him after "gouging" it out with a pick, to attack the solid vein from the side.

Grain, Eng. Of coal, the lines of structure or parting parallel with the main gangways and hence crossing the breasts.

Grain-tin, Corn. 1. Crystalline tin ore. 2. Metallic tin.

Grapnel. An implement for removing the core left by an annu-

lar drill in a bore-hole, or for recovering tools, fragments, etc., fallen into the hole.

Grampus, U.S. The tongs with which bloomary loups and billets are handled.

Granzas, Sp. Small pieces of ore.

Graphite. A crystalline form of carbon.

Graphitic carbon. That portion of the carbon in iron or steel which is present as graphite.

Grass, Corn. The surface over a mine. Bringing ores to grass is taking them out of the mine.

Grassero, Sp. A slag-heap.

Grate, Corn. See Screen (as applied to stamps).

Grate coal, Penn. See Coal.

Gravel-mine, U. S. An accumulation of auriferous gravel.

Grueso, Sp. Lump ore. The term is in use at the quicksilver mines of California.

Green sand. Sand used for moulds without previous drying or mixture.

Gray ore, Corn. Copper-glance. See Copper-ores.

Gray slag. The slag from the Flintshire lead furnace. It is rich in lead.

Griddle, Corn. A miner's sieve to separate ore from halvans.

Grip. A small, narrow cavity.

Grizzly, PAC. A grating to eatch and throw out large stones from sluices.

Groove or Grove. 1. Derb. A mine; from the Germ. Grube. See Roll.

Ground, CORN. The rock in which a vein is found; also, any given portion of the mineral deposit itself.

Growan, Corn. Decomposed granite; sometimes the granite rock.

Gubbin. A kind of ironstone.

Grundy. Granulated pig iron.

Guard. A support in front of a roll-train to guide the bar into the groove, sometimes called a side-guide.

Guides. 1. The timbers at the side of a shaft to steady and guide the cage. 2. The holes in a cross-beam through which the stems of the stamps in a stamp-mill rise and fall. 3. In a rolling-mill a guide is a wedge-shaped piece held in the groove of a roll to prevent the sticking of the bar by peeling it out of the groove. When the guide is held by a hanger or counter-weight against the under side of the roll, it is called a hanging-guide.

Guillotine. A machine for breaking iron with a falling weight. Gullet. An opening in the strata.

Gun-metal. An alloy of copper with tin or zinc, and sometimes a little iron. The common formula is nine parts copper to one tin. Aich's metal and some other gun-metals contain zinc and iron but no tin.

Gunnies or Gunniss, Corn. The vacant space left where the lode has been removed.

Hacienda, Sp. Exchequer; treasury; public revenue; capital; funds; wealth; landed estate; establishment. In mining it is usually applied to the offices, principal buildings, and works for reducing the ores.

Hack. 1. See Pick. 2. A sharp blade on a long handle used for cutting billets in two.

Hade, Derb. See Underlay.

Hähner furnace. A continuously-working shaft furnace for roasting quicksilver ores. The fuel is charcoal, charged in alternate layers with the ore. The Vall'Alta furnace is a modification, having the iron tubes of the Alberti.

Hair-plate. See Bloomary.

Half-marrow, NEWC. Young boys, of whom two do the work of one putter.

Halvans, Corn. Ores much mixed with impurities.

Hammer-pick. See Poll-pick.

Hanging-coal. A portion of the coal-seam which, by the removal of another portion, has had its natural support removed, as in holing. Hanging-quide. See Guide.

Hanging-side, or Hanging-wall, or Hanger, Corn. The wall or side over the vein.

Hazel. Freestone.

Hard head. A residual alloy, containing much iron and arsenic, produced in the refining of tin.

Hard lead. Lead containing certain impurities, principally antimony.

Hasenclever furnace. A roasting furnace, consisting of a long inclined channel (in its first form, a succession of inclined shelves in a shaft) down which the ore slides in a thin sheet, heated from below.

Head-year. That part of deep-boring apparatus which remains at the surface.

Head-house. See Gallows-frame.

Heading. 1. The vein above a drift. See Back. 2. An interior

level or air-way driven in a mine. 3. In *long-wall* workings, a narrow passage driven upward from a gangway in starting a working in order to give a *loose end*.

Headings. In ore-dressing, the heavier portions collecting at the upper end of a buddle or sluice, as opposed to the tailings, which escape at the other end, and the middlings, which receive further treatment.

Head-piece. See Cap.

Headsman, NEWC. See Putter.

Head-stocks. See Gallows-frame.

Head-tree, NEWC. See Cap.

Headway, Newc. See Cross-heading. The headways are the second set of excavations in post-and-stall work.

Heap, Newc. The refuse at the pit's mouth.

Hearth. 1. The floor or sole of a reverberatory. 2. The crucible of a blast furnace.

Hearth-ends. Particles of unreduced lead ore expelled by the blast from a furnace.

Heat. One operation in a heating furnace, Bessemer converter, puddling furnace, or other furnace not operating continuously.

Heating-furnace. The furnace in which blooms or piles are heated before hammering or rolling.

Heave, Corn. A horizontal dislocation of a vein or stratum.

Helve. A lift-hammer for forging blooms.

Henderson process. The treatment of copper sulphide ores by roasting with salt, to form chlorides, which are then leached out and precipitated. Henderson originally proposed to volatilize the chlorides, and the leaching and precipitation are not original with him. Longmaid and many other metallurgists have proposed them in various modifications.

Hercules powder. See Explosives.

Hewer, NEWC. The man who cuts the coal.

Hitch, Scot. and Newc. 1. A minor dislocation of a vein or stratum not exceeding in extent the thickness of the vein or stratum.

2. A hole cut in the side-rock, when this is solid enough, to hold the eap of a set of timbers, permitting the leg to be dispensed with.

High explosive. An explosive or detonating compound developing more intense and instantaneous force than gunpowder. Most high explosives in general use contain nitroglycerin. See Explosives.

Hog-back. 1. A sharp anticlinal, decreasing in height at both ends until it runs out. 2. A ridge produced by highly tilted strata.

Hogger-pipe. The upper terminal pipe of the mining pump.

Hogger-pump. The topmost pump in a shaft.

Holing. 1. The working of a lower part of a bed of coal for bringing down the upper mass. 2. The final act of connecting two workings underground.

Hollow-fire, Eng. A kind of hearth with blast, used for reheating the stamps produced in the South Welsh process of fining, or the bars of blister-steel in the manufacture of shear-steel.

Hollway process. The removal of sulphur from iron and copper sulphides by fusion and pneumatic treatment, analogous to the manner in which carbon, etc., are removed in the Bessemer process.

Homogeneous metal. A variety of ingot-metal produced by the open-hearth process. See Steel.

Hopper. 1. A trap at the foot of a shoot for regulating the contents of a wagon. 2. A place of deposit for coal or ore.

Horn. See Spoon.

Horse, CORN. 1. A mass of country-rock inclosed in an ore-deposit. 2. See Salamander.

Horse-back, Newc. A portion of the roof or floor which bulges or intrudes into the coal.

Horse-flesh ore, Corn. Bornite. See Copper-ores.

Horse-gin. Gearing for hoisting by horse-power.

Hot-bed. A platform in a rolling-mill on which rolled bars lie to cool.

Hot-blast. Air forced into a furnace after having been heated.

Hotching, NORTH ENG. See Jigging.

House of water, CORN. A cavity or space filled with water.

Howell furnace. A form of revolving roasting furnace.

H-piece. That part of a plunger-lift in which the valves or clacks are fixed.

Hudge. An iron bucket for hoisting ore or coal.

Hulk. See Dzhu.

Huel, CONN. See Wheal.

Hungry. A term applied to hard barren vein-matter, such as white quartz (not discolored with iron oxide).

Hunt & Douglas process. The treatment of copper oxide (or roasted sulphide) ores by dissolving the oxides of copper in a hot solution of protochloride of iron and common salt. From the solution thus obtained, metallic iron precipitates metallic copper, at the same time regenerating the protochloride of iron for further use.

Hurdy-gurdy wheel. A water-wheel operated by the direct impact of a stream upon its radially-placed paddles.

Hushing. The discovery of veins by the accumulation and sudden discharge of water, which washes away the surface soil and lays bare the rock. See Booming.

Hutch. 1, Scot. A low car, suited both to run in a level and to be hoisted on a cage. 2, Corn. A cistern or box for washing ore. See Jiq.

Hydranlicking, PAC. Washing down a bank of earth or gravel by the use of pipes, conveying water under high pressure.

Idria furnace. See Leopoldi furnace.

Impregnation. An ore-deposit consisting of the country-rock impregnated with ore, usually without definite boundaries.

Inbye or Inbyeside, Newc. Further into a mine, away from the shaft.

Incline. 1. A shaft not vertical; usually on the dip of a vein.See Slope. 2. A plane, not necessarily under ground.

Indicator. 1. An instrument for showing at any moment the position of the cage in the shaft. 2. An instrument for recording, by a diagram, upon a card the varying pressure of the steam in the cylinder of a steam-engine during the stroke.

Infiltration-theory. The theory that a vein was filled by the infiltration of mineral solutions.

Ingot. A cast bar or block of metal.

Injection-theory. The theory that a vein was filled first with molten mineral.

In place. Of rock, occupying, relative to surrounding masses, the position that it had when formed.

Inquartation. See Quartation.

Intake. The passage by which the ventilating current enters a mine. See Downcast, which is more appropriate for a shaft; Intake for an adit.

Inwalls. The interior walls or lining of a shaft-furnace.

Irestone or Ironstone, Corn. Greenstone.

Irestone. Hard clay slate; hornstone; hornblende.

Iron. The principal varieties of iron are wrought-iron and castiron (see Pig-iron). Wrought-iron, also called bar-iron and weld-iron, is the product of the forge or the puddling furnace, cast-iron of the blast furnace. The former approaches pure iron; the latter is an alloy of iron and carbon. Steel (except some of the so-called "low"

or "mild" steels, which are more nearly wrought-iron fused and cast) stands between them, having less carbon than cast-iron and more than wrought-iron. Some of the carbon in cast-iron is usually segregated during cooling in the form of graphite, and this determines the grade of the iron as No. 1 foundry (the most graphitic, coarsely crystalline, soft and black), No. 2 foundry (less open in grain), gray forge or mill-iron (still closer in grain, suitable for puddling), mottled (spotted with white iron), and white (hard, brittle, radially crystalline, containing its carbon mostly in alloy with the iron, and showing no visible graphite). These grades are also called simply No. 1, 2, 3, etc. So-called silver-gray, glazy, or carbonized iron is usually an iron rendered brittle by excess of silicon. Ingot iron, see Steel. Anthracite, charcoal, and coke iron are names given to pig-iron according to the fuel with which it is made.

Iron hat. See Gossan.

Iron-ores: Magnetic (magnetite, protoperoxide), specular (hematite proper, red hematite, anhydrous peroxide), brown iron ore (hematite, brown hematite, limonite, etc., hydrated peroxides), spathic (siderite, carbonate), clay-ironstone (black band, argillaceous siderite). See Fossil ore.

Iron-reduction process. See Precipitation process.

Ironstone. 1. Iron-ore. 2. See Irestone.

Jacket. A covering to prevent radiation of heat, as the jacket of a steam boiler; also, a casing around a furnace hearth in which water is allowed to stand or circulate to keep the walls cool.

Jackhead-pit. A small shaft sunk within a mine.

Jackhead-pump. A subordinate pump in the bottom of a shaft, worked by an attachment to the main pump-rod.

Jack-roll, Newc. See Windlass.

Jadding or Judding. See Holing.

Jagging. A mode of earrying ore to the reduction-works in bags on horses, mules, etc.

Jars. A part of percussion-drilling apparatus for deep holes, which is placed between the bit and the rods or cable, and which by producing at each up-stroke a decided jar of the bit jerks it up, though it may be tightly wedged in the hole.

Jig-brow. See Jinny-road.

Jig-chain. S. Staff. A chain hooked to the back of a skip and running round a post, to prevent its too rapid descent on an inclined plane.

Jigging, Corn. Separating ores according to specific gravity with a sieve agitated up and down in water. The apparatus is called a jig or jigger.

Jinny-road. A gravity plane underground.

Joachimsthal process. The extraction of silver from sulphuretted ores by converting into chloride, leaching with sodium hyposulphite, and precipitating the silver as sulphide with sodium sulphide.

Jowl, Newc. A noise made for a signal by hammering at the faces of two levels expected to meet.

Judge, Derb. and Newc. A measuring-stick to measure coalwork under ground.

Judd, Newc. In whole working, a portion of the eoal laid out and ready for extraction; in pillar-working (i. e., the drawing or extraction of pillars), the yet unremoved portion of a pillar.

Jugglers. Timbers set obliquely against pillars of coal, to carry a plank partition, making a triangular air-passage or man-way.

Jump. 1, PAC. To take possession of a mining claim alleged to have been forfeited or abandoned. 2. A dislocation of a vein.

Jumper, Corn. and Newc. A drill or boring tool, consisting of a bar, which is "jumped" up and down in the bore-hole.

Kann. See Cand.

Kast furnace. A small circular shaft furnace with three or four tuyeres, for lead smelting.

Keckle-meckle. The poorest kind of lead ore.

Keere. 1. See Cauf. 2. A tub used in collecting grains of heavy ore or metal; a dolly tub.

Kernel-roasting. See Roasting.

Keril, Derb. A veinstone, consisting of a mixture of earbonate of lime and other minerals.

Kibbal or Kibble, Corn. and Wales. An iron bucket for raising ore.

Kicker. Ground left in first cutting a vein, for support of its sides.

Kieve, CORN. A tub for tozing tin-ore.

Killas, Corn. Clay-slate.

Kiln. A furnace for the calcination of coarsely broken ore or stone; also, an oven for drying, charring, etc.

Kind's plug. A wooden plug attached to an iron rod, used in connection with sand for recovering tubing from bore-holes.

King-pot. The large central pot or crucible in a brass-melting furnace.

King's yellow. Sulphide of arsenic.

Kirving, NEWC. The entting made at the bottom of the coal by the hewer.

Kish. The blast-furnacemen's name for the graphite-segregations seen in pig-iron and in the cinder of a furnace making a very gray iron.

Kit. A wooden vessel.

Kitchen. See Laboratory (2).

Knits or Knots. Small particles of ore.

Knobbling-fire. A bloomary for refining cast-iron.

Knockings. See Riddle.

Knox & Osborne furnace. A continuously working shaft-furnace for roasting quicksilver ores, having the fireplace built in the masonry at one side. The fuel is wood.

Knots. Small particles of ore.

Kröhnke process. The treatment of silver ores preparatory to amalgamation, by humid chloridization with copper dichloride.

Krupp washing process. The removal of silicon and phosphorus from molten pig iron by running it into a Pernot furnace, lined with iron oxides. Iron ore may also be added, and the bath is agitated by rotation for five to eight minutes only. See Bell's dephosphorizing process.

Labor, Sp. Labor; work; a working. This term is applied in mining to the work which is actually going on, and to the spaces which have been dug out. It includes galleries, cavities, and shafts.

Laboratory. 1. A place fitted up for chemical analysis, etc. 2. The space between the fire and flue-bridges of a reverberatory furnace in which the work is performed; also called the kitchen and the hearth.

Ladle. A vessel into which molten metal is conveyed from the furnace or crucible, and from which it is poured into the moulds.

Lagging. Planks, slabs, or small timber placed over the caps or behind the posts of the timbering, not to carry the main weight, but to form a ceiling or a wall, preventing fragments of rock from falling through.

Lame-skirting, Newc. Widening a passage by cutting coal from the side of it.

Lander, CORN. The man at the shaft-month who receives the kibble.

Landry-box, Newc. A box at the top of a set of pumps into which the water is delivered.

Lath door-set. A weak lath-frame surrounding a main door-frame, the space between being for the insertion of spills.

Lath-frame or crib. A weak lath-frame, surrounding a main crib, the space between being for the insertion of piles.

Laths, CORN. The boards or lagging put behind the durns.

Launder, CORN. A wooden trough, gutter or sluice.

Lazadores, Sp. Persons employed to collect workmen for a mine. Lazyback, S. Staff. The place at the surface where coal is stacked for sale.

Leaching. See Lixiviation.

Lead (pronounced like the verb to lead), PAC. See Lode.

Lead-fume. The fumes escaping from lead furnaces, and containing both volatilized and mechanically suspended metalliferous compounds.

Leader, CORN. A small vein leading to a larger one.

Lead-ores. Galena (galenite, sulphide); antimonial lead-ore (bournonite, sulphantimonide of lead and copper); white lead-ore (cerussite, carbonate); green lead-ore (pyromorphite, the phosphate, or mimetite or mimetesite, the arseno-chloride); lead-vitriol (anglesite, sulphate); yellow lead-ore (wulfenite, molybdate); red lead-ore (crocoite, chromate).

Lead-spar, Corn. Anglesite. See Lead-ores.

Leap, DERB. A fault. See Jump.

Leat, Corn. A watercourse.

Leath. Applied to the soft part of a vein.

Leavings, Corn. The ores left after the crop has been removed.

Ledge, PAC. See Lode.

Ledger-wall. See Foot-wall.

Leg. A prop of timber supporting the end of a stull, or the cap of a set of timber.

Leopoldi furnace. A furnace for roasting quicksilver ores, differing from the Bustamente in having a series of brick condensing chambers. Both are intermittent, i. e., have to be charged and fired anew after each operation. The California intermittent furnace is a modification of the Leopoldi, having the fireplace on the side.

Level. A horizontal passage or drift into or in a mine. It is customary to work mines by levels at regular intervals in depth, num-

bered in their order below the adit or drainage level, if there be one.

Lewis. An iron instrument for raising heavy blocks of stone.

Ley, Sp. Proportion of metal in the ore; fineness of bullion; also, an alloy or base metal.

Lid. A flat piece of wood placed between the end of a prop or stempel and the rock.

Lifters, CORN. The wooden beams used as stems for stamps in old-fashioned stamp-mills.

Lift-hammer. See Tilt-hammer.

Lifting-dog. A claw-hook for grasping a column of bore-rods while raising or lowering them.

Lignite. See Coal.

Limp. An instrument for striking the refuse from the sieve in washing ores.

Lining, Newc. See Dialling.

Linnets, Derb. Oxidized lead-ores.

Liquation. See Eliquation.

Litharge. Protoxide of lead.

Lithofracteur. See Explosives.

Little Giant. A jointed iron nozzle used in hydraulic mining.

Lixiviation. The separation of a soluble from an insoluble material by means of washing with a solvent.

Location. 1. The act of fixing the boundaries of a mining claim, according to law. 2. The claim itself.

Loam. An impure potter's clay, containing mica or iron ochre.

Loch, DERB. and WALES. See Vug.

Lock-timber. An old plan of putting in stull-pieces in Cornwall and Devon. The pieces were called lock-pieces.

Lode, CORN. Strictly a fissure in the country-rock filled with mineral; usually applied to metalliferous lodes. In general miner's usage, a lode, rein, or ledge is a tabular deposit of valuable mineral between definite boundaries. Whether it be a fissure formation or not is not always known, and does not affect the legal title under the United States federal and local statutes and customs relative to lodes. But it must not be a placer, i. e., it must consist of quartz or other rock in place, and bearing valuable mineral.

Lodge, Wales. See Platt.

Log, S. Staff. A balance-weight near the end of the hoisting-rope of a shaft to prevent its running back over the pulley.

Longmaid process. See Henderson process.

Long tom, PAC. A kind of gold-washing cradle.

Long-wall. A method of coal mining by which the whole seam is taken out as the working faces progress, and the roof is allowed to fall behind the workers, except where passages must be kept open, or where the gob being packed in the space formerly occupied by the coal, prevents caving. According as the work of extraction begins at the boundary of the winning, and converges back to the shaft, or begins with the coal nearest the shaft and proceeds outward to the boundaries, it is called long-wall retreating or long-wall advancing.

Loob or loobs, CORN. The clayey or slimy portion washed out of tin-ore in dressing.

Loop. See Loup.

Loop-drag. An eye at the end of a rod through which tow is passed for cleaning bore-holes.

Loose-end. A gangway in long-wall working, driven so that one side is solid ground while the other opens upon old workings. See Fast-end.

Lorry. A hand-car used on mine tramways.

Lost level, CORN. "Level" is "lost" when a gallery has been driven with an unnecessarily great departure from the horizontal.

Loup. The pasty mass of iron produced in a bloomary or puddling furnace. See Puddle-ball.

Lowe, Newc. A light. A "piece of lowe" is part of a candle.

Luckhart furnace. A continuously working shaft-furnace for roasting quicksilver ores, having the fireplace in the shaft at the bottom, protected by a cast-iron roof. The fuel is wood.

Lum. A chimney over an upcast pit.

Lump-coal, Penn. See Coal.

Litrmann front. An arrangement of water-cooled castings through which iron and einder are tapped from the blast furnace, thus avoiding the use of a forehearth. See Closed front.

Lying-wall. See Foot-wall.

Machine-whim. A rotary steam-engine for winding.

Magistral, Sp. A powder of roasted copper pyrites, used in the amalgamation of silver ores.

Main-rod, Corn. See Pump-rod.

Mainway. A gangway or principal passage.

Makings, Newc. The small coals hewn out in kirving.

Malleable castings. Small iron castings made malleable by "annealing" or decarburizing by cementation in powdered hematite or other oxide of iron.

Mallet, CORN. The sledge-hammer used for striking or beating the borer.

Mandril. See Maundril.

Manganese-ores. Gray oxide (pyrolusite, polianite, anhydrous peroxide, and manganite, hydrated sesquioxide); black manganese (hausmannite, protoperoxide); braunite (anhydrous sesquioxide); red manganese ore (rhodochrosite, a carbonate, or rhodonite, a silicate); also, manganiferous iron ores.

Man-hole, Corn. The hole in a sollar through which men pass upon the ladder or from one ladder to the next.

Man-machine or Man-engine, CORN and DERB. A mechanical lift for lowering and raising miners in a shaft by means of a reciprocating vertical rod of heavy timber with platforms at intervals, or of two such rods, moving in opposite directions. In the former case, stationary platforms are placed in the shaft, so that the miner in descending, for instance, can step from the moving platform at the end of the down-stroke, and step back upon the next platform below at the beginning of the next down-stroke. When two rods are employed, the miner steps from the platform on one rod to that on the other.

Man-of-war, Staff. A small pillar of coal left in a critical spot; also, a principal support in thick coal workings.

Manta, Sp. Blanket; sack of ore.

Mantle. The outer wall and easing of an iron blast furnace, above the hearth.

Manway. A small passage, used by workmen but not for transportation.

Maquilla, Sp. A mill where ore is ground on shares.

 $\it Marl.$ Calcareous clay, sometimes used for the hearths of enpelling-furnaces.

Martin process. Called also the Siemens-Martin and the openhearth process. See Steel.

Mass-copper, Lake Sup. Native copper, occurring in large masses.

Massicot. See Litharge.

Matrix. The rock or earthy material containing a mineral or metallic ore; the gangue.

Matt, or Matte, Fr. A mass consisting chiefly of metallic sulphides got in the fusion of ores.

Maul, DERB. A large hammer or mallet.

Maundril, DERB. and S. WALES. A prying pick with two prongs.

Mear. Derb. Thirty-two yards of ground measured on the vein.

Measures. Strata of coal, or the formation containing coal beds.

Meat-earth. The vegetable mould.

Meetings, Newc. The place at middle-depth of a shaft, slope, or plane, where ascending and descending cars pass each other.

Merced, Sp. A gift. This term is applied to a grant which is made without any valuable consideration.

Merchant-iron. See Mill.

Merchant-train. A train of rolls for reducing iron piles or steel ingots, blooms, or billets to bars of any of the various round, square, flat, or other shapes, known as merchant iron or steel.

Mercury-ores. Native mercury; cinnabar (sulphide).

Merrit-plate. See Bloomary.

Metal, Sp. 1. This term is applied both to the ore and to the metal extracted from it. It is sometimes used for vein, and even for a mine itself. Metal en piedra, ore in the rough state. Metal ordinario, common ore. Metal pepena, selected ore. Metal de ayuda, ore used to assist the smelting of other ores. 2. Copper regulus or matt obtained in the English process. The following varieties are distinguished by appearance and by their percentage of copper (here given in approximate figures): Coarse, 20 to 40; red, 48; blue, 60; sparkle, 74; white, 77; pimple, 79. Fine metal includes the latter four varieties. Hard metal is impure copper containing a large amount of tin. 3. Scot. All the rocks met with in mining ore. 4. Road metal, rock used in macadamizing roads.

Metal-notch. See Tap-hole.

Mica-powder. See Explosives.

Mill. 1, Eng. That part of an iron works where puddle-bars are converted into merchant-iron, i. e., rolled iron ready for sale in bars, rods, or sheets. See Forge. 2. By common usage, any establishment for reducing ores by other means than smelting. More strictly, a place or a machine in which ore or rock is crushed. 3. An excavation made in the country rock, by a cross-cut from the workings on a vein, to obtain waste for gobbing. It is left without timber so that the roof may fall in and furnish the required rock. 4. Corn. A passage through which ore is shot underground. See Pass and Shoot.

Mill-cinder. The slag from the puddling-furnaces of a rolling-mill.

Mill-run, Pac. 1. The work of an amalgamating mill between two clean-ups. 2. A test of a given quantity of ore by actual treatment in a mill.

Mine. 1. In general, any excavation for minerals. More strictly, subterranean workings, as distinguished from quarries, placer and hydraulic mines, and surface or open works. The distinction between the French terms mine and minière results entirely from the law, and depends upon the depth of the working. The former is the more general term, and, ordinarily speaking, includes the latter, which signifies shallow or surface workings. 2. In a military sense, a mine is a subterranean gallery run under an enemy's works, to be subsequently exploded.

Mine-pig, Eng. See Pig-iron.

Miner, PENN. The workman who cuts the coal, as distinguished from the laborer who loads the wagons, etc.

Mineral. In miners' parlance, ore.

Mineral caoutchouc. Elastic bitumen.

Mineral charcoal. A pulverulent, lustreless substance, showing distinct vegetable structure, and containing a high percentage of carbon with little hydrogen and oxygen, occurring in thin layers in bituminous coal.

Mineralized. Charged or impregnated with metalliferous mineral.

Mineral oil or Naphtha. A limpid or yellowish liquid, lighter
than water, and consisting of hydrocarbons. Petroleum is heavier
than naphtha, and dark greenish in color when crude. Both exude
from the rocks; but naphtha can be distilled from petroleum.

Mineral pitch. Asphaltum.

Mineral right. The ownership of the minerals under a given surface, with the right to enter thereon, mine, and remove them. It may be separated from the surface ownership, but, if not so separated by distinct conveyance, the latter includes it.

Mineral wool. See Slag-wool.

Mine-rent. The rent or royalty paid to the owner of a mineral right by the operator of the mine—usually dependent, above a fixed minimum, upon the quantity of product.

Mineria, Sp. Mining. This term embraces the whole subject, including both mines and miners, and also the operations of working mines and of reducing their ores. It, however, is often used in a more restricted sense.

Minero, Sp. Miner. This term is not limited to those who work mines, but includes their owners, and all who have the qualifications

prescribed in the ordinances, and are enrolled as members of the body or craft. Many of the laborers who work in mines are not, technically speaking, miners. This term is sometimes used in the old laws for *mine*.

Miners' inch, PAC. A local unit for the measurement of water supplied to hydraulie miners. It is the amount of water flowing under a certain head through one square inch of the total section of a certain opening, for a certain number of hours daily. All these conditions vary at different localities. At Smartsville, Cal., the discharge opening is a horizontal slit, 4 inches wide, in a 2-inch plank, with the standing head of water in the feed-box 9 inches above the middle of the slit. Each square inch of this opening will discharge 1.76 cubic feet per minute. A miners' inch in use in Eldorado County, Cal., discharges 1.39 cubic feet per minute. At North Bloomfield, Cal., and other places, the discharge is 50 inches long by 2 wide (giving 100 miners' inches) through a 3-inch plank, with the water 7 inches above the centre of the opening. Each inch is 1.50 to 1.57 cubic feet per minute in practice, or 59.05 to 61.6 per cent. of the theoretical discharge. These figures are taken from the paper of A. J. Bowie, Jr., on "Hydraulic Mining in California," Trans. Am. Inst. M. E., vol. vi, p. 59.

Mineta, Sp. A little mine; a chamber, or cavity.

Minium. Protosesquioxide of lead.

Mispickel, GERM. Arsenical pyrites.

Mistress, Newc. A lantern used in coal-mines.

Mobby, S. Staff. A leathern girdle, with small chain attached, used by the boys who draw bowkes.

Mock-lead, Corn. Zineblende.

Moil or Moyle, CORN. A drill pointed like a gad.

Monkey-drift. A small prospecting drift.

Monitor, PAC. A kind of nozzle used in hydraulicking.

Monnier process. The treatment of copper sulphide ores by roasting with sodium sulphate, and subsequent lixiviation and precipitation.

Monoclinal. Applied to any limited portion of the earth's crust throughout which the strata dip in the same direction.

Montefiore furnace. A peculiar furnace in which zinc-dust is compressed at a high temperature.

Moorstone, Corn. Loose masses of granite found on Cornish moors.

More, CORN. A quantity of ore in a particular part of a lode, as a more of tin.

Mortar. 1. A heavy iron vessel, in which rock is crushed by hand with a pestle, for sampling or assaying. 2. The receptacle beneath the stamps in a stamp mill, in which the dies are placed, and into which the rock is fed to be crushed.

Mosaic gold. Disulphide of tin.

Mote. See Squib.

Mothergate, Newc. The main passage in a district of workings.

Mottled. See Iron.

Mouth. The end of a shaft or adit emerging at the surface.

Mountain limestone. The English designation of a limestone of the lower part of the carboniferous age; called also subcarboniferous limestone.

Muck-bar. Bar-iron which has passed once through the rolls.

Mucks, S. Staff. See Smut.

Muffle. A semi-cylindrical or long arched oven (usually small and made of fire-clay), heated from outside, in which substances may be exposed at high temperature to an oxidizing atmospheric current, and kept at the same time from contact with the gases from the fuel. Cupellation and scorification assays are performed in muffles, and on a larger scale copper ores were formerly roasted in muffle-furnaces.

Muller. The stone or iron in an arrastre, or grinding or amalgamating pan, which is dragged around on the bed to grind and mix the ore-bearing rock.

Mun, Corn. Any fusible metal.

Mundic, Corn. Iron pyrites. White mundic is mispickel.

Narrow work. The driving of gangways or aiways; also, any dead work.

Nasmyth hammer. A steam-hammer, having the head attached to the piston-rod, and operated by the direct force of the steam.

Native. Occurring in nature; not artificially formed. Usually applied to the metals.

Nays, Corn. See Noys.

Needle or Nail, Corn. A copper or copper-pointed implement, placed in a bore-hole during charging, to make, by its withdrawal, an aperture for the insertion of the rush or train.

Negrillo, Sp. A silver-ore; black sulphuret of silver.

Neptune powder. See Explosives.

Neutral. Of slags, neither acid nor basic; of wrought-irons, neither red-short nor cold-short; of iron-ores, suitable for the production of neutral irons.

Niccoliferous or Nickeliferous. Containing nickel.

Niekel ores. Copper-nickel (niccolite, arsenide of nickel); antimonial nickel (breithauptite, antimonide); white nickel (rammelsbergite, binarsenide); nickel pyrites (pentlandite, sulphide of nickel and iron, millerite, sulphide); nickeliferous gray antimony (ullmannite, arsenantimonide); nickeliferous serpentine (refdanskite, hydrons magnesian silicate); also, niccoliferous ores of copper, cobalt, manganese, etc.

Nicking, Newc. The cutting made by the hewer at the side of the face. Nickings is the small coal produced in making the nicking.

Nicking-trunk. A tub in which metalliferous slimes are washed. Nip, Newc. 1. A crush of pillars or workings. 2. See Pinch.

Nipping-fork. A tool for supporting a column of hore-rods while raising or lowering them.

Nitroglycerin. See Explosives.

Nittings. The refuse of good ore.

Noble metals. The metals which have so little affinity for oxygen (i. e., are so highly electronegative) that their oxides are reduced by the mere application of heat without a reagent; in other words, the metals least liable to oxidation under ordinary conditions. The list includes gold, silver, mercury, and the platinum group (including palladium, iridium, rhodium, ruthenium, and osmium). The term is of alchemistic origin.

Noddle or Nodule. A small rounded mass.

Noger. A jumper drill.

Nogs, Derb. and Corn. Square blocks or logs of wood, piled on one another to support a mine roof.

Nose. An accumulation of chilled material around the inner end of a *tnyere* in a smelting shaft-furnace, protecting and prolonging the tuyere.

Nose-helve, Eng. See Frontal hammer.

Nuts. Small coal.

Occlusion. The mechanical retention of gases in the pores of solids.

Ochre. A term applied to metallic oxides occurring in an earthy, pulverulent condition, as iron ochre, molybdic ochre.

Oil-well. A dug or bored well, from which petroleum is obtained by pumping or by natural flow.

Old man. Ancient workings; youres.

Old men. The persons who worked a mine at any former period of which no record remains.

Open cast, Scot. See Open eut.

Open-crib timbering. Shaft timbering with cribs alone, placed at intervals.

Open cut. A surface-working, open to daylight.

Open-front. The arrangement of a blast furnace with a jore-hearth.

Open-hearth. See Reverberatory furnace.

Openings. The parts of coal mines between the pillars, or the pillars and ribs.

Opens. Large caverns.

Open-sand castings. Castings made in moulds simply excavated in sand, without flasks.

Open-work. A quarry or open cut.

Operator, Penn. The person, whether proprietor or lessee, actually operating a colliery.

Ore. 1. A natural mineral compound, of the elements of which one at least is a metal. The term is applied more loosely to all metalliferous rock, though it contain the metals in a free state, and occasionally to the compounds of non-metallic substances, as *sulphur ore*. 2. Corn. Copper-ore; tin-ore being spoken of in Cornwall as tin.

Ore-hearth. See Scotch hearth.

Ore-washer. A machine for washing clay and earths out of earthy brown-hematite ores.

Orpiment. Sesquisulphide of arsenic.

Outbye or Outbyeside, Newc. Nearer to the shaft, and hence further from the jorewinning.

Outcrop. The portion of a vein or stratum emerging at the surface, or appearing immediately under the soil and surface-débris.

Outlet. The passage by which the ventilating current goes out of a mine. See Upcast.

Output. The product of a mine.

Oval groove. A groove of U-section in a roll.

Overburden. 1. Corn. See Burden (1). 2. To charge in a furnace too much ore and flux in proportion to the amount of fuel. 3. The waste which overlies the good stone in a quarry.

Overman, Eng. The mining official next in rank below the manager, who is next below the agent.

Overpoled copper. Copper from which all the suboxide has been removed by poling.

Oxidation. A chemical union with oxygen.

Pack. A wall or pillar built of gob to support the roof.

Pair or Pare, Corn. Two or more miners working in common.

Pan. 1. See Panning. 2. A cylindrical vat of iron, stone, or wood, or these combined, in which ore is ground with mullers and amalgamated. See Amalgamation.

Pane. The striking-face of a hammer.

Panel. 1. A heap of dressed ore. 2. A system of coal-extraction in which the ground is laid off in separate districts or panels, pillars of extra size being left between.

Panning, Aust. and PAc. Washing earth or crushed rock in a pan, by agitation with water, to obtain the particles of greatest specific gravity which it contains (chiefly practiced for gold, also for quicksilver, diamonds, and other gems).

Parachute. 1. A kind of safety-catch for shaft cages. 2. In rodboring, a cage with a leather cover to prevent a too rapid fall of the rods in case of accident.

Parcel, CORN. A heap of dressed ore ready for sale.

Parkes process. The desilverization of lead by treatment with zinc.

Parrot coal, Scot. See Coal.

Parting. 1. A small joint in coal or rock, or a layer of rock in a coal seam. 2. The separation of two metals in an alloy, especially the separation of gold and silver by means of nitric or sulphuric acid.

Parting-sand. Fine dry sand, which is sifted over the partings in a mould to facilitate their separation when the flask is opened.

Pass, Corn. 1. An opening in a mine through which ore is shot from a higher to a lower level. See Shoot. 2. In rolling mills the passage of the bar between the rolls. When the bar passes "on the flat" it is called a flatting-pass; if "on the edge," an edging-pass.

Patent fuel, Eng. The fuel produced by the agglomeration of coal-slack into lumps.

Patera process. See Joachimsthal process.

Patio, Sp. The yard where the ores are cleaned and assorted;

also, the amalgamation floor, or the Spanish process itself of amalgamating silver ores on an open floor.

Pattinson process. A process in which lead containing silver is passed through a series of melting-kettles, in each of which crystals of a poorer alloy are deposited, while the fluid bath, ladled from one kettle to the next, is proportionately richer in silver. In mechanical pattinsonation the operation is performed in a cylindrical vessel, in which the bath is stirred mechanically, and from which, as the richer alloy crystallizes, the poorer liquid is repeatedly drained out. Steam pattinsonation is a variety of the Pattinson process, in which steam is conducted through the lead bath to assist the refining.

Pavement. The floor of a mine.

Pay-streak. The zone in a vein which carries the profitable or pay ore.

Peach, CORN. Chlorite.

Pea-coal, Penn. See Coal.

Percussion-table. An inclined table, agitated by a series of shocks, and operating at the same time like a buddle. It may be made self-discharging and continuous by substituting for the table an endless rubber cloth, slowly moving against the current of water, as in the Frue vanner.

Pernot furnace or Post-Pernot furnace. A reverberatory puddling or smelting furnace, having a circular, inclined, revolving hearth.

Pershbecker furnace. A continuously working shaft-furnace for roasting quicksilver ores, having two fire-places at opposite sides. The fuel is wood.

Pertinencia, Sp. The extent of a mining location in Mexico, to which a title is acquired by denunciation.

Peter or peter out. To fail gradually in size, quantity, or quality.

Pewter. An alloy of tin and lead. Other metals are often added,
or the lead is replaced entirely with copper, zine, antimony, etc.

Pick. A pick-axe with one or two points. The usual miners' pick has but one.

Picker or Poker. A hand chisel for dzhuing, held in one hand and struck with a hammer.

Pick-hammer. A hammer with a point, used in cobbing.

Pickling. Cleaning sheet-iron or wire by immersion in acid.

Pig. An ingot or east bar of metal. See Pig-iron.

Pig-iron. Crude cast-iron from the blast furnace. When the furnace is tapped the molten iron flows down a runner moulded in

sand, from which it enters the sows or lateral runners, flowing from these again into the pig-beds, the separate parallel moulds of which form the pigs. In each bed the ingots lie against the sow like suckling pigs, whence the two names. See Iron. Mine-pig is pig-iron made from ores only; einder-pig, from ores with admixture of some forge or mill-cinder.

Pike. See Pick.

Piking. See Cobbing.

Pile. 1. The fagot or bundle of flat pieces of iron prepared to be heated to welding-heat and then rolled. 2. To make up into piles or fagots. 3. Piles are long thick laths, etc., answering in shafts, in loose or "quick" ground, the same purpose as spills in levels, piles being driven vertically.

Pillar-and-stall. See Post-and-stall.

Pilz furnace. A circular or octagonal shaft-furnace, maintaining or increasing its diameter towards the top, and having several tuy-eres; used in smelting lead-ores.

Pinch, CORN. To contract in width.

Pink ash, Penn. See Coal.

Pipe or Pipe-vein, DERB. An ore-body of elongated form.

Pipe-clay, U. S. A fine clay found in hydraulic mines.

Pipe-ore. Iron ore (limonite) in vertical pillars, sometimes of conical, sometimes of hour-glass form, imbedded in clay. Probably formed by the union of stalactites and stalagmites in caverns.

Piping. 1. PAC. See Hydraulicking. 2. The tubular depression caused by contraction during cooling, on the top of iron or steel ingots.

Pit. 1. A shaft. 2. A stack or meiler of wood, prepared for the manufacture of charcoal.

Pitch, CORN. 1. The limits of the sct to tributers. 2. The inclination of a vein, or of the longer axis of an ore-body.

Pitch-bag, CORN. A bag covered with pitch, in which powder is inclosed for charging damp holes.

Pit-coal. See Coal.

Pit-eye, Eng. The bottom of the shaft of a coal-mine; also the junction of a shaft and a level.

Pit-eye pillar. A barrier of coal left around a shaft to protect it from caving.

Pit-frame. The framework carrying the pit-pulley.

Pitman. 1. CORN. A man employed to examine the lifts of pumps and the drainage. 2. Newc. A working miner.

Pitwork, Corn. The pumps and other apparatus of the engine shaft.

Place. See In place.

Placer, Sp. A deposit of valuable mineral, found in particles in alluvium or diluvium, or beds of streams, etc. Gold, tin ore, chromic iron, iron ore, and precious stones are found in placers. By the United States Revised Statutes all deposits not classed as veins of rock in place are considered placers.

Plane. An incline, with tracks, upon which materials are raised in cars by means of a stationary engine, or are lowered by gravity.

Plank-timbering. The lining of a shaft with rectangular plank frames.

Plank-tubbing. The lining of a shaft with planks, spiked on the inside of curbs.

Plat. The map of a survey in horizontal projection.

Plate-metal. See metal.

Plate-shale. A hard argillaceous bed.

Platinum-ores. Mixtures of native platinum in grains with various other metals and minerals.

Platt, Corn. An enlargement of a level near a shaft, where ore may await hoisting, wagons pass each other, etc.

Plattner process. See Chlorination.

Plomo, Sp. Lead. Plomo-plata, lead-silver.

Plug. A hammer closely resembling the bully.

Plumb. 1. Vertical. 2. Soft.

Plumbago. Graphite.

Plunger. The piston of a force-pump.

Plush-copper. Chalcotrichite, a fibrous red copper ore.

Pocket. 1. A small body of ore. 2. A natural underground reservoir of water. 3. A receptacle, from which coal, ore, or waste is loaded into wagons or cars.

Podar. See Mundic.

Pointed boxes. Boxes in the form of inverted pyramids or wedges in which ores, after crushing and sizing, are separated in a current of water.

Pole-tools. The tools used in drilling with rods. See Cable-tools. Poling. Stirring a metallic bath (of copper, tin or lead) with a pole of green wood, to cause chullition and deoxidation in the refining process.

Polings. Poles used instead of planks for lagging.

Poll, Corn. The head or striking part of a miner's hammer.

Poll-pick. A pick with a head for breaking away hard partings in coal-seams or knocking down rock already seamed by blasting.

Polroz (pronounced *Polrose*), Corn. The pit underneath a water-wheel.

Ponsard furnace. A furnace in which the escaping combustiongases, passing through tubular flues, heat the incoming air continuously through the flue-walls.

Poppet-heads, Corn. A timber frame over a shaft to earry the hoisting pulley.

Post. 1. A pillar of coal or ore. 2. An upright timber.

Post furnace. See Pernot furnace.

Post-and-stall. A mode of working coal, in which so much is left as pillar and so much is taken away, forming rooms and thirlings. The method is called also bord-and-pillar, pillar-and-breast, etc.

Potstone. Compact steatite.

Potter's clay and Pipe-clay. Pure plastic clay, free from iron, and consequently white after burning.

Power-drill. See Rock-drill.

Precious metals. See Noble metals.

Precipitation process. The treatment of lead ores by direct fusion with metallic iron or slags or ores rich in iron; performed generally in a shaft-furnace, rarely in a reverberatory. Often combined with the roasting and reduction process.

Prian, Corn. Soft white elay.

Pricker. See Necdle.

Prill, Corn. 1. The best ore after cobbing. 2. See Button.

Pringap. The distance between two mining possessions in Derbyshire.

Produce. 1. The marketable ores or minerals produced by mining and dressing. 2. Corn. The amount of fine copper in one hundred parts of ore.

Producer. Sec Gas-producer.

Prop. A timber set to carry a roof or other weight acting by compression in the direction of the axis.

Prop-crib timbering. Shaft-timbering with *cribs* kept at the proper distance apart by means of *props.*

Prospecting. Searching for new deposits; also, preliminary explorations to test the value of lodes or placers. The prospect is good or bad.

Proving-hole. A small heading driven to find and follow a coalseam, lost by a dislocation.

Pryan. Ore in small pebbles mixed with clay.

Pudding-stone. A conglomerate in which the pebbles are rounded. See Breccia.

Puddle-bars. See Forge.

Puddle-steel. See Steel.

Puddle-train. A train of rolls for reducing squeezed puddle-balls to puddle or muck-bars.

Puddling. 1. The process of decarburizing cast iron by fusion on the hearth of a reverberatory furnace, lined (fixed or fettled) with ore or other material rich in oxide of iron. The bath is stirred with a rabble to expose it to the action of the lining and of an air current. The escape of carbonic oxide causes it to boil, whence the early name of this method of puddling, viz., boiling. Dry puddling is performed on a silicious hearth, and the conversion is effected rather by the flame than by the reaction of solid or fused materials. As the amount of carbon diminishes the mass becomes less fusible and begins to coagulate (come to nature), after which it is worked together into lumps (puddle balls, loups) and removed from the furnace to be hammered (shingled) or squeezed in the squeezer, which presses out the cinder, etc., and compacts the mass at welding heat, preparatory to rolling. Silicon and phosphorus are also largely removed by puddling, passing into the cinder. Mechanical puddlers (in which the bath is agitated by revolution, or by mechanical rabbles, to save handlabor) are employed to a limited extent. 2. The term puddling, now applied in metallurgy exclusively to the above process, originally referred to the puddling of clay or clay and charcoal upon the masonry of a furnace hearth, to form a lining. Ditches, reservoirs, etc., are puddled with clay to make them water-tight.

Pug-tub. See Settler.

Pulley-frame. Gallows-frame.

Pulp, PAC. Pulverized ore and water; also applied to dry-crushed ore.

Pulp-assay, PAC. The assay of samples taken from the pulp after or during crushing.

Pump-bob. See Bob.

Pump-rod. The rod or system of rods (usually heavy beams) connecting the steam-engine at the surface, or at a higher level, with the pump-piston below. See Balance-bob.

Pump-station. See Station.

Punch or Puncheon. See Leg.

Punch-prop, Newc. A short prop.

Put, Newc. To convey coal from the working breast to the tramway. This is usually done by young men (putters).

Putty-powder. Crude oxide of tin, used for giving opaque whiteness to enamels, or for grinding glass.

Put-work. See Tut-work.

Pyrometer. An instrument for measuring high temperatures.

Quarry. An open or "day" working, usually for the extraction of building-stone, slate, or limestone.

Quartation. The separation of gold from silver by dissolving out the latter with nitric acid. It requires not less than \(^3\) silver in the alloy, whence the name, which is also applied to the alloying of gold with silver, if necessary, to prepare it for this method of parting.

Quartz. 1. Crystalline silica. 2. PAC. Any hard gold or silver ore, as distinguished from gravel or earth. Hence quartz-mining, as distinguished from hydraulic, etc.

Quartzose. Containing quartz as a principal ingredient.

Quere, queere or queear, Corn. A small cavity or fissure.

Quick. 1. Applied to a productive vein as distinguished from dead or barren. 2. PAC. Quicksilver.

Quick ground. Ground in a loose incoherent state.

Quicksand. Sand which is (or becomes, upon the access of water) "quick," i. e., shifting, easily movable or semi-liquid.

Quicksilver-ores. See Mercury-ores.

Quintal. One hundred pounds avoirdupois.

Rabble. An iron bar bent to a right angle at the end. See Puddling.

Race. A small thread of spar or ore.

Rack, Corn. A stationary buddle.

Rafter-timbering. Timbering in which the pieces are arranged like the rafters of a house.

Rag-burning, Corn. See Tin-witts.

Ragging. A rough cobbing.

Rail-train. A train of rolls for reducing iron piles or steel ingots or blooms to rails.

Raise. See Rise.

Rake, Derb. A fissure vein crossing the strata.

Raking-prop. An inclined prop.

Ramble, Newc. A shale bed on the top of a coal seam, which falls as the coal is removed.

Rancho, Sp. An estate or property; a farm (PAC. ranch).

Random. The direction of a rake-cein.

Rapper. A lever or hammer at the top of a shaft or inclined plane, for signals from the bottom.

Raschette furnace. A shaft furnace used in lead, copper, and iron smelting, and having an oblong rectangular or oval horizontal section.

Reaction process. See Roasting and reaction process.

Realgar. Sulphide of arsenic.

Reamer. A tool for enlarging a bore-hole.

Record. To enter in the book of the proper officer (usually a district or county officer) the name, position, description, and date of a mining claim or location. See District.

Red-ash, Penn. See Coal.

Redevance, Fr. A tax, duty, or rent. In mining law it means a tax or duty payable to the government or to the surface owner.

Red-lead. See Minium.

Red-short. Brittle at red heat. See Cold-short.

Reduce. 1. To deprive of oxygen. 2. In general, to treat metal-lurgically for the production of metal.

Reed, CORN. See Spire.

Reef, Austr. See Lode.

Refinery. See Run-out fire.

Refining. 1. The purification of crude metallic products. The refining of "base bullion" (silver-lead) produces nearly pure lead and silver. 2. The conversion of gray into white cast iron in a run-out fire.

Refractory. Resisting the action of heat and chemical reagents; a quality undesirable in ores, but desirable in furnace-linings, etc.

Regenerator. A chamber, filled with open-work of brick, to take up the heat of the gases of combustion from a furnace, and subsequently impart it to a current of air, the air and gas being conducted alternately through the chamber. See Siemens furnace.

Regule, Fr. A copper regulus from which most of the impurities have been removed by liquation.

Regulus. 1. The metallic mass which sinks to the bottom of a furnace or crucible, separating itself by gravity from the supernatant slag or matt. 2. An intermediate product obtained in smelting ores, specially those of copper, lead, silver and nickel, and consisting

chiefly of metallic sulphides. In this sense it is synonymous with matt, or the GERM. Stein. Antimony regulus is metallic antimony.

Rend-rock. See Explosives.

Renk, Newc. The average distance coal is brough by the putters. Rests. The arrangement at the top and bottom of a pit for supporting the shaft-cage while changing the tubs or cars.

Retorting. Removing the mercury from an amalgam by volatilizing it in an iron retort, conducting it away, and condensing it.

Reverberatory furnace. A furnace in which ores are submitted to the action of flame, without contact with the fuel. The flame enters from the side or end, passes upward over a low wall or bridge, strikes the roof (arch) of the furnace, and is reverberated downward upon the charge.

Reversing rolls. See Three-high train.

Rib. 1. In coal mining, the solid coal on the side of a gallery or long-wall face; a pillar or barrier of coal left for support. 2. The solid ore of a vein; an elongated pillar left to support the hanging-wall, in working out a vein.

Ribbed. Containing hone.

Ribbon-borer. A boring-tool consisting of a twisted flat steel blade.

Rick, PENN. An open heap or pile in which coal is coked.

Riddle, CORN. and Scot. A sieve. The large pieces of ore and rock picked out by hand are called knockings. The riddlings remain on the riddle; the fell goes through.

Rider. See Horse.

Riffle. A groove or interstice, or a cleat or block so placed as to produce the same effect, in the bottom of a sluice, to catch free gold.

Rim-rock. The bed-rock rising to form the boundary of a placer or gravel deposit.

Ring, Newc. A gutter cut around a shaft to eatch and conduct away the water.

Ringe. See Cowl.

Rise or Riser, CORN. A shaft or winze excavated upward.

Rise-heading. See Heading, in long-wall.

Rivelaine. A pick with one or two points, formed of flat iron, used to undercut coal by scraping instead of striking.

Roasting. Calcination, usually with oxidation. Good, dead, or sweet roasting is complete roasting, i. c., carried on until sulphurons and arsenious fumes cease to be given off. Kernel-roasting is a process of treating poor sulphuretted copper ores, by roasting in lumps,

whereby copper (and nickel) are concentrated in the interior of the lumps.

Roasting and reaction process. The treatment of galena in a rererberatory, by first partially roasting at a low temperature, and then partially fusing the charge at a higher temperature, which causes a reaction between the lead-oxide formed by roasting and the remaining sulphide, producing sulphurous acid and metallic lead.

Rousting and reduction process. The treatment of lead ores by roasting to form lead-oxide, and subsequent reducing fusion in a shaft-furnace.

Rob. To extract pillars previously left for support; or, in general, to take out ore or coal from a mine with a view to immediate product, and not to subsequent working.

Rock-breaker. Usually applied to a class of machines, of which Blake's rock-breaker is the type, and in which the rock is crushed between two jaws, both movable, or one fixed and one movable. It is common to use a rock-breaker instead of hand-spalling to prepare ore for further crushing in the stamp-mill.

Rock-drill. A machine for boring in rock, either by percussion, effected by reciprocating motion, or abrasion, effected by rotary motion. Compressed air is the usual motive power, but steam also is used. The Burleigh, Haupt, Ingersoll, Wood, and other machines operate percussively; the diamond drill (which see) abrasively.

Rocker. A short trough in which auriferous sands are agitated by oscillation, in water, to collect their gold.

Rod-tools. See Pole-tools.

Rolley. A large truck carrying two corves.

Rolley-way. A gangway.

Rolling. See Roll-train.

Rolls. 1. Cylinders of iron or steel revolving towards each other, between which rock is made to pass, in order to crush it. 2. See Roll-train.

Roll-train. The set of plain or grooved rolls through which iron or steel piles, ingots, blooms, or billets are passed, to be rolled into various shapes.

Rondle or Rondelle. The crust or scale which forms upon the surface of molten metal in cooling.

Roof. The rock overlying a bed or flat vein.

Roofing. The wedging of a loaded wagon or horse against the top of an underground passage.

Room, Scot. See Breast and Post-and-stall.

Rosette copper. Disks of copper (red from the presence of suboxide) formed by cooling the surface of molten copper through sprinkling with water.

Rossie furnace. An American variety of hearth for the treatment of galena, differing from the Scotch hearth in using wood as fuel, working continuously, and having hollow walls, to heat the blast.

Roughing rolls. The rolls of a train which first receive the pile, ingot, bloom, or billet, and partially form it into the final shape.

Roughs, Conn. Coarse, poor sands, resulting from tin-dressing.

Round coal. See Lump-coal.

Rounder. See Reamer.

Row, Corn. Large, rough stones.

Royalty. The dues of the lessor or landlord of a mine, or of the owner of a patented invention.

Rozan process. An improvement of the Pattinson process.

Rubber. A gold-quartz amalgamator, in which the slime is rubbed against amalgamated copper surfaces.

Rullers, CORN. The workmen who wheel ore in wheelbarrows

underground.

Run, CORN. 1. The natural falling or closing together of underground workings. 2. Certain accidents to the winding apparatus.

3. By the run. A method of paying coal miners per linear yard of breast exervated, instead of by the wagon of clear coal produced.

4. A long deep trough in which slimes settle.

5. See Counter.

Runner. The channel through which molten metal is conducted from the blast furnace or cupola to the pig-bed, converter or moulds.

See Pig-iron.

Run-out fire. A forge in which cast-iron is refined.

Run-steel. Malleable castings.

Rush, CORN. See Spire.

Rusty. Applied to coals discolored by water or exposure, as well as to quartz, etc., discolored by iron oxide.

Rusty gold, PAC. Free gold, which does not easily amalgamate, the particles being coated, as is supposed, with oxide of iron.

Saddle. An anticlinal in a bed or flat vein.

Safety-cage. A cage with a safety eatch.

Safety-car. See Barney.

Safety-catch. An automatic device for preventing the fall of a cage in a shaft or a car in an incline, if the supporting cable breaks Safety-lamp. A lamp, the flame of which is so protected that it

will not immediately ignite fire-damp. There are several varieties, invented by Davy, Stephenson, Clanny, and others.

Salamander. A mass of solidified material in a furnace hearth; called also a sow and bear.

Saline. A salt spring or well; salt works.

Sampson-post. An upright post which supports the walking-beam, communicating motion from the engine to a deep-boring apparatus.

Sand-pump. A cylinder with a valve at the bottom, lowered into a drill-hole from time to time, to take out the accumulated slime resulting from the action of the drill on the rock. Called, also, Shell-pump and Sludger.

Scaffold. An obstruction in a blast furnace above the tuyeres caused by an accumulation or shelf of pasty, unreduced materials, adhering to the lining.

Seal, CORN. A portion of earth or rock which separates and falls from the main body.

Scale. 1. The crust of metallic oxide formed by cooling of hot metals in air. Hammer-scale and roll-scale are the flaky oxides which fall from the bloom, ingot, or bar under hammering or rolling. 2. The incrustation caused in steam-boilers by the evaporation of water containing mineral salts. 3. A scale of air (Newc.) is a small portion of air abstracted from the main current.

Scarcement. A projecting ledge of rock, left in a shaft as footing for a ladder, or to support pit-work, etc.

Scarfing. Splicing timbers, so cut that when joined the resulting piece is not thicker at the joint than elsewhere.

Schist. Crystalline rock, usually micaceous, having a slaty structure.

Schlicker, GERM. The skimmings from molten unrefined lead, containing chiefly copper, iron, and zinc, with a little antimony and arsenic.

Schorl. Black tourmaline.

Scoria or Scoriae. See Slag.

Scorification. A process employed in assaying gold and silver ores, and performed in a shallow clay vessel (scorifier), in which ore, lead, and borax-glass are exposed to heat and oxidation in a muffle. The operation involves roasting, fusion, and scorification proper, or the formation of a slag, which is not, like the litharge produced in cupellation, absorbed by the vessel.

Scotch hearth. A low forge or furnace of cast-iron, with one tuyere,

in which rich galena is treated by a sort of accelerated roasting and reaction process.

Scouring cinder. A basic slag, which attacks the lining of a shaft-furnace.

Scoran lode, CORN. A lode having no gossan at or near the surface.

Scraper. A tool for cleaning bore-holes.

Screen. A sieve of wire-cloth, grate-bars, or perforated sheet-iron used to sort ore and coal according to size. Stamp-mortars have screens on one or both sides, to determine the fineness of the escaping pulp.

Screw-bell. A recovering tool in deep boring, ending below in a hollow screw-threaded cone.

Scrin or Skrin, DERB. A small subordinate vein.

Seam. 1. A stratum or bed of coal or other mineral. 2. CORN. A horse-load. 3. A joint, eleft, or fissure.

Seat, DERB. The floor of a mine.

Seed-bag. A bag filled with flaxseed and fastened around the tubing in an artesian well, so as to form, by the swelling of the flaxseed when wet, a water-tight packing, preventing percolation down the sides of the bore-hole from upper to lower strata. When the tubing is pulled up the upper fastening of the bag breaks, and it empties itself, thus presenting no resistance to the extraction of the tubing.

Segregate, PAC. To separate the undivided joint ownership of a mining claim into smaller individual "segregated" claims.

Segregation. A mineral deposit formed by concentration from the adjacent rock.

Selvage, or Selfedge. A layer of clay or decomposed rock along a vein-wall. See Gouge.

Semi-anthracite. See Coal.

Semi-bituminous coal. See Coal.

Separator. 1. A machine for separating, with the aid of water or air, materials of different specific gravity. Strictly, a separator parts two or more ingredients, both valuable, while a concentrator saves but one and rejects the rest; but the terms are often used interchangeably. 2. Any machine for separating materials, as the magnetic separator, for separating magnetite from its gangue.

Set or Sett, CORN. 1. A grant of mining ground, as the assignment of a certain part of a mine under contract or tribute. 2. A frame of timber for supporting excavations.

Settler. A tub or vat, in which pulp from the amalgamating pan or battery-pulp is allowed to settle, being stirred in water, to remove the lighter portions.

Shadd, Corn. Smooth, round stones on the surface, containing tin-ore, and indicating a vein.

Shaft. 1. A pit sunk from the surface. 2. The interior of a shaft-furnace above the boshes.

Shaft-furnace. A high furnace, charged at the top and tapped at the bottom.

Shaft-walls. 1. The sides of a shaft. 2. Newc. Pillars of coal left near the bottom of a pit.

Shake. 1. A cavern, usually in limestone. 2. A crack in a block of stone.

Shaking-table. See Percussion-table.

Shambles. Shelves or benches, from one to the other of which successively ore is thrown in raising it to the level above, or to the surface.

Shearing. 1. The vertical side-cutting which, together with holing or horizontal undercutting, constitutes the attack upon a face of coal.

2. Cutting up steel for the crucible.

Shears, Corn. Two high timbers, standing over a shaft and united at the top to carry a pulley, for lifting or lowering timbers, pipes, etc., of greater length than the ordinary hoisting-gear can accommodate.

Sheathing. A close partition or covering of planks.

Sheave. The groove-wheel of a pulley.

Shelf, Corn. The solid rock or bed-rock, especially under alluvial tin-deposits.

Shell-pump. See Sand-pump.

Shelly. 'The condition of coal which has been so much faulted and twisted that it is not massive, but easily breaks into conchoidal pieces.

Shet, S. Staff. The broken-down roof of a coal-mine.

Shift. 1. The time for a miner's work in one day. 2. The gang of men working for that period, as the day-shift, the night-shift.

Shift-boss. The foreman in charge of a shift of men.

Shingling. Hammering blooms, billets, etc.

Shiver. 1. Shale; a hard argillaceous bed. 2. See Sheave.

Shoad, Conn. Ore washed or detached from the vein naturally. See Float-ore.

Shoading or Shoding, CORN. The tracking of boulders towards the vein or rock from which they have come.

Shoe. A piece of iron or steel, attached to the bottom of a stamp or muller, for grinding ore. The shoe can be replaced when worn out.

Shoot. 1. See Chute. 2. See Blast. A shot is a single operation of blasting.

Shooting-needle. A sharp metal rod, to form a vent-hole through the tamping to a blasting-charge.

Shore-nose shell. A cylindrical tool, cut obliquely at bottom, for boring through hard clay.

Show. 1. The pale-blue, lambent flame on the top of a common candle-flame, indicating the presence of fire-damp. 2. See Blossom.

Shute. See Chute.

Sicker. See Zighyr.

Siddle. The inclination of a seam of coal.

Side-basset. A transverse direction to the line of dip in strata.

Side-guide. See Guard.

Side-laning, S. STAFF. Widening a gate-road (abandoned for that purpose) so as to make it part of a new side of work.

Side of work, S. Staff. The series of breasts and pillars connected with a gate-road in a colliery.

Siemens furnace. A reverberatory furnace, heated by gas, with the aid of regenerators.

Sigger. See Zighyr.

Silesian zine furnace. A furnace in which zinc is reduced and distilled from calcined ores in muffles.

Silicious. Consisting of or containing silex or quartz.

Sill. 1. A stratum. 2. A piece of wood laid across a drift to constitute a frame with the posts and to carry the track of the tramway.

Silt. See Alluvium.

Silver ores. Silver-glance (argentite, sulphide); horn-silver (cerargyrite, chloride); dark-ruby silver (pyrargyrite, sulphantimonide); light-ruby silver (proustite, sulphansenide); brittle silver-glance (stephanite, antimonial sulphide of silver, and polybasite, arsenical and antimonial sulphide of several metals); white ore (argentiferous gray copper, tetrahedrite, antimonial sulphide of iron, zine, copper, lead, and silver); stetefeldtite and partzite (antimoniates); also, argentiferous lead, copper, and zine ores.

Sinker-bar. A heavy bar attached above the jars to cable-drilling tools.

Sinking-fire. A forge in which wrought-iron scrap or refined pigiron is partially melted or welded together by means of a charcoalfire and a blast.

Siphon-tap. See Arends' tap.

Sit or Sits. A settling or falling of the top of workings. See Thrust and Creep.

Sizing. Separating ores according to size of particles, preparatory to dressing.

Skep or Skip, Corn. An iron box working between guides, in which ore or rock is hoisted. It is distinguished from a kibble, which hangs free in the shaft.

Skew-plate. Sec Bloomary.

Skimmings or Skimpings, Corn. The poorest part skimmed off the jigger.

Skull. A crust of solidified steel lining a Bessemer ladle.

Slack. Small coal; coal dirt. See Culm (2).

Slag. The vitreous mass separated from the fused metals in smelting ores.

Slag-hearth. A hearth on the principle of the Scotch-hearth for the treatment of slags, etc., produced by lead-smelting in the reverberatory furnace. The English slag-hearth has one tuyere; the Castilian or Spanish, three.

Slag-lead. Lead obtained by a re-smelting of gray slag.

Slag-wool. A finely fibrous mass produced by blowing steam or air into molten slag.

Slant. A heading driven diagonally between the dip and the strike of a coal-seam; also called a run. See Run and Counter.

Slate. A sedimentary rock splitting into thin plates. The terms slate, shale, and schist are not sharply distinguished in common use, particularly among older writers. Strictly, according to recent authors, slate may be crystalline; schist is always so; shale is always (and slate most frequently) non-crystalline. There is also a notion of coarser or less complete lamination attached to the term shale, as of a rock splitting into thicker or less perfect plates than slate. Both may be argillaceous, arenaceous, calcareous, silicious, etc., according to their lithological character. The terms slaty, shaly, and schistose describe the respective structures.

Sleck, NEWC. Mud deposited by water in a mine.

Sleeper. See Sill.

Sleeping-table, Corn. A stationary buddle. For the strict distinction sometimes made between buddle and table, see Buddle.

Sliekensides. Polished and sometimes striated surfaces on the walls of a vein, or on interior joints of the vein-material or of rockmasses. They are the result of movement.

Slide, Corn. 1. A vein of clay intersecting and dislocating a vein vertically; or the vertical dislocation itself. 2. An upright rail fixed in a shaft with corresponding grooves for steadying the cages.

Slide-joint. A connection acting in rod-boring, like the jars in rope-boring.

Slimes, CORN. The most finely crushed ores.

Slime-table. See Buddle.

Sline. Natural transverse cleavage of rock.

Slip. A vertical dislocation of the rocks.

Slipes, S. Staff. Sledge-runners, upon which a skip is dragged from the working breast to the tramway.

Slit. A communication between two levels.

Slitter. See Pick.

Sliver, Eng. A thin wooden strip, inserted into grooves in the adjacent edges of two boards of a brattice, to make it air-tight.

Slope. See Incline.

Sludge. See Slimes.

Sludger. See Sand-pump.

Shires PAC See Slimes

Slums, PAC. See Slimes.

Slurry, N. Wales. See Regulus (2).

Smalt. A blue pigment or glass, consisting of silica, potash, and cobalt.

Smeddum, Scot. The smaller particles which pass through the sieve of the hutch.

Smelting. Reducing ores by fusion in furnaces.

Smift. A fuse or slow match.

Smitham or Smiddan, Derb. Lead-ore dust.

Smut. 1. S. Staff. Bad, soft coal, containing much earthy matter. 2. See Blossom.

Snoff, CORN. A short candle-end, put under a fuse to light it.

Snore-hole. The hole in the lower part or wind-bore of a mining pump, to admit the water.

Soapstone. Compact tale or steatite; often applied incorrectly to soft unctuous clays or marls.

Softening. Of lead, the removal of antimony and other impurities.

Solder. A metal or alloy used to unite adjacent surfaces of less tusible metals or alloys. Soft solder is a compound of tin and lead;

hard solder, of copper and zine, or tin, copper, and zine, or tin and antimony; gold solder, of gold, silver, and copper; silver solder, of silver and copper, or silver and brass; and so on.

Sole. 1. The bottom of a level. 2. The bottom of a reverberatory furnace.

Solid crib-timbering. Shaft-timbering with cribs laid solidly upon one another.

Sollar, CORN. A platform in a shaft, usually constituting a landing between two ladders.

Sough, DERB. See Adit.

Sow. 1. See Salamander. 2. See Pig-iron.

Spale, Corn. To fine for disobedience of orders.

Spall or Spawl. To break ore. Ragging and cobbing are respectively coarser and finer breaking than spalling, but the terms are often used interchangeably. Pieces of ore thus broken are called spalls.

Spar. A name given by miners to any earthy mineral having a distinct cleavable structure and some lustre; in Cornwall usually quartz.

Spears. See Pump-rods.

Speise or Speiss, Germ. Impure metallic arsenides (principally of iron), produced in copper and lead smelting. Cobalt and nickel are found concentrated in the speiss obtained from ores containing these metals

Spel or Spell. A change or turn.

Spence-furnace. A long reverberatory, for thorough roasting.

Spend. To break ground; to continue working.

Spiegeleisen. Manganiferous white cast-iron.

Spiking-curb, Eng. A curb to the inside of which plank-tubing is spiked.

Spilling, Corn. A process of driving or sinking through very loose ground.

Spills, Corn. Long thick laths or poles driven ahead horizontally around the door-frames, in running levels in loose ground—a kind of lagging put in ahead of the main timbering.

Spire. The tube carrying the train to the charge in a blast-hole. Also called *reed* or *rush*, because these, as well as spires of grass, are used for the purpose.

Spitting. The violent ejection of globules by a body of molten silver, in the act of becoming solidified by cooling.

Splint coal. See Coal.

Split. 1. To divide a ventilating current. 2. When a parting in a coal-seam becomes so thick that the two portions of the seam must be worked separately, each is called a split. See Bench.

Sponge. Metal in a porous form, usually obtained by reduction without fusion. See Chenot process.

Spoon. 1. An instrument made of an ox or buffalo horn, in which earth or pulp may be delicately tested by washing to detect gold, amalgam, etc. 2 (or Spoon-end). The edge of a coal-basin when the coal-seam spoons, i. e., rises to the surface, after growing thinner as it approaches its termination.

Spout, S. STAFF. See Air-head.

Sprag. 1. A prop. 2. A short round piece of wood used to block the wheels of a car.

Spreader. A horizontal timber below the cap of a set, to stiffen the legs, and to support the brattice when there are two air-courses in the same gangway.

Spreaders. Pieces of timber stretched across a shaft as a temporary support of the walls.

Sprue. A piece of metal attached to a casting, occupying the gate or passage through which the metal was poured.

Spud. A nail, resembling a horseshoe nail, with a hole in the head, driven into mine-timbering, or into a wooden plug inserted in the rock, to mark a surveying-station.

Spur. A branch leaving a vein, but not returning to it.

Spurns, S. STAFF. Small connecting masses of eoal, left for safety during the operation of cutting, between the hanging coal and the main body.

Square sets. A kind of timbering used in large spaces.

Squat, CORN. 1. Tin-ore mixed with spar. 2. See Bunch of ore.

Squeeze. The settling, without breaking, of the roof over a considerable area of workings.

Squeezer. A machine for reducing the puddle-ball to a compact mass, ready for the hammer or rolls.

Squib. A slow-match or safety-fuse, used with a barrel.

Squirting. Forcing lead by hydraulic pressure into the form of rods or pipes.

Stack. 1. A chimney. 2. See Shaft-furnace.

Stall, S. Staff. See Room, Breast, and Post-and-Stall.

Stamping. Reducing to the desired fineness in a stamp-mill. The grain is usually not so fine as that produced by grinding in pans.

Stamp-mill. An apparatus (also the building containing the apparatus) in which rock is crushed by descending pestles (stamps), operated by water or steam-power. Amalgamation is usually combined with the crushing when gold or silver is the metal sought, but copper and tin-ores, etc., are stamped to prepare them for dressing.

Stamps, S. Wales. The pieces into which the rough bars shingled from the finery ball are broken, to be piled for subsequent roll-

ing into sheet-iron.

Stamp-work, LAKE SUP. Rock containing disseminated native copper.

Stanchion. See Leg.

Standage, Eng. A large sump, or more than one, acting as a reservoir.

Stannary. A tin-mine or tin-works.

Station. 1. See Platt. 2. Also, a similar enlargement of shaft or level to receive a balance-bob (bob-station), pump (pump-station), or tank (tank-station).

Steamboat-coal, PENN. See Coal.

Steam-coal. See Coal.

Steel. A compound or alloy of iron, principally with carbon, which may be cast, forged, hardened, and tempered. Ordinary steel contains from 0.5 to 1.5 per cent. of carbon. More carbon makes cast-iron; less carbon, wrought-iron. But this classification is not now strictly adequate or applicable, either to the scientific or to the commercial use of the term. The so-called mild or low or structural steels (low in carbon, and hence relatively soft and tough), as compared with high or hard or tool steels, do not always harden or temper. An international committee appointed by the American Institute of Mining Engineers has recommended the use of the following classification:

1. That all malleable compounds of iron with its ordinary ingredients, which are aggregated from pasty masses, or from piles, or from any forms of iron not in a fluid state, and which will not sensibly harden and temper, and which generally resemble what is called "wrought-iron," shall be called weld-iron (Germ., Schweisseisen; Fr., fer soudé).

2. That such compounds, when they will from any cause harden and temper, and which resemble what is now called "puddled steel," shall be called weld-steel (GERM., Schweissstahl; Fr., acier soudé).

3. That all compounds of iron with its ordinary ingredients, which have been cast from a fluid state into malleable masses, and which

will not sensibly harden by being quenched in water while at a red heat, shall be called *ingot-iron* (GERM., Flusseisen; Fr., fer fondu).

4. That all such compounds, when they will from any cause so harden, shall be called *ingot-steel* (GERM., Flussstahl; FR., acier fondu).

This proposed classification does not cover ordinary cast or pig iron. It is a classification of the malleable compounds only. The Institute has recommended its use in papers and discussions, except as to the term weld, for which a substitute was desired, and meanwhile the continuance of the old term wrought, though in a somewhat wider significance, was suggested. The resolution of the Institute concludes as follows: "It being understood that the ingot-iron and ingot-steel of this classification constitute, taken together, what is now commercially known as cast-steel, including the so-called low or soft caststeels." Bessemer-steel is made by decarburizing cast iron in a converter. (See Bessemer process.) Blister or cement-steel is made by carburizing wrought iron bars by packing them in charcoal powder and heating without access of air. It is melted in crucibles to cast-steel, or hammered (tilted) to shear-steel (for cutlery, etc.), or rolled to springsteel. Puddled steel is made by arresting the puddling process before wrought iron has been produced, and thus retaining enough carbon in the bath to constitute steel. Natural steel is a similar product. obtained from the refining of cast-iron. Crucible cast-steel is steel made by the fusion in crucibles, either of blister-steel, or puddled steel, or steel-scrap, or other ingredients and fluxes which will produce the desired quality. Cast-steel in its widest sense, as now employed, comprises all malleable compounds of iron produced by fusion, including therefore the Bessemer and open-hearth metal. Open-hearth, called also Martin-Siemens steel, is made in the reverberatory furnace (almost invariably a gas-furnace on the Siemens regenerative system, since an intense temperature is required) by the reaction, in the fused bath, of cast-iron with wronght-iron, iron-oxide, or iron ore. At a certain stage of the process a deoxidizing or recarburizing agent (spiegeleisen, ferromanganese) is added. Chrome-steel is a crucible cast-steel in which chromium is a constituent. Tungsten or Wolfram-steel is a steel containing tungsten. Phosphorus-steel is a steel in which the amount of phosphorus exceeds that of carbon. Damascus-steel is a laminated mixture of steel and wrought iron. Indiasteel or Wootz is manufactured in India direct from the ore.

Stemmer, NEWC. See Tamping-bar.

Stemming, Newc. The tamping put above the charge in a bore-hole.

Stempel or Stemple. 1. Derb. One of the cross-bars of wood placed in a mine-shaft to serve as steps. 2. A stull-piece. 3. A cap, both sides of which are hitched instead of being supported upon legs. See Stull.

Stenton, Newc. A passage between two winning headways. A stenton-wall is the pillar of coal between them.

Step-grate. A grate made in steps or stairs, to promote completeness of the combustion of the coal burned upon it.

Step-vein. A vein alternately cutting through the strata of country-rock, and running parallel with them.

Stetefeldt furnace. A shaft-furnace for desulphurizing or chloridizing-roasting, in which the pulverized charge falls freely down the shaft.

Stirrup. See Temper-screw.

Stockwork (GERM., Stockwork). An ore-deposit of such a form that it is worked in floors or stories. It may be a solid mass of ore, or a rock-mass so interpenetrated by small veins of ore that the whole must be mined together. Stockworks are distinguished from tabular or sheet-deposits (veins, beds), which have a small thickness in comparison with their extension in the main plane of the deposit (that is, in strike and dip).

Stone-coal. See Coal.

Stone-head, Eng. The solid rock first encountered in sinking a shaft.

Stoop-and-Rooms, Scot. See Post-and-Stall.

Stope, Corn. To excavate ore in a vein by driving horizontally upon it a series of workings, one immediately over the other, or vice versa. Each horizontal working is called a stope (probably a corruption of step), because when a number of them are in progress, each working face being a little in advance of the next above or below, the whole face under attack assumes the shape of a flight of stairs. When the first stope is begun at a lower corner of the body of ore to be removed, and, after it has advanced a convenient distance, the next is commenced above it, and so on, the process is called over-hand stoping. When the first stope begins at an upper corner, and the succeeding ones are below it, it is under-hand stoping. The term stoping is loosely applied to any subterranean extraction of ore except that which is incidentally performed in sinking shafts, driving levels, etc., for the purpose of opening the mine.

Stopping. 1. See Stoping. 2. A partition of boards, masonry,

or rubbish, to stop the air-current in a mine, or force it to take a special desired direction.

Stove. The oven in which the blast of a furnace is heated.

Stove-coal, Penn. See Coal.

Stowbord, NEWC. A place into which rubbish is put.

Stowee. 1. A windlass. 2. Derb. Stowees are wooden landmarks, placed to indicate possession of mining ground.

Stowing. A method of mining in which all the material of the vein is removed and the waste is packed into the space left by the working.

Straightening press. A power-press to straighten iron and steel bars, such as rails, shafting, etc.

Strake, CORN. An inclined launder for separating or tying ground ore in water.

Stratum. A bed or layer.

Streak. The powder of a mineral, or the mark which it makes when rubbed upon a harder surface.

Stream-tin, Corn. Tin-ore in alluvial deposits, as pebbles.

Stream-work, Corn. Work on stream-tin.

Streamers, CORN. Searchers for stream-tin.

Striated. Marked with parallel grooves or striæ.

Strike. The direction of a horizontal line, drawn in the middle plane of a vein or stratum not horizontal.

String, CORN. A small vein.

Stringing-deals, Eng. Thin planks, nailed to the inside of the curbs in a shaft, so as to suspend each curb from those above it.

Strip. To remove from a quarry, or other open working, the overlying earth and disintegrated or barren surface rock.

Studdles, Corn. 1. Props supporting the middle of stulls. 2. Distance-pieces between successive frames of timbering.

Stull, Corn. A platform (stull-covering), laid on timbers (stull-pieces), braced across a working from side to side, to support workmen or to carry ore or waste.

Stulm. See Adit. From the GERM. Stollen.

Stump, Penn. A small pillar of coal, left at the foot of a breast to protect the gangway.

Stup. A pulverized mixture of clay and coke or coal. Probably from the Germ. Gestübbe.

Sturt. A tribute-bargain which turns out profitable for the miner. Stythe, Newc. Choke-damp.

Sublimation. The volatilization and condensation of a solid substance, without fusion.

Sublimation-theory. The theory that a vein was filled first with metallic vapors.

Sucker-rod. The pump-rod of an oil-well.

Sulphur. 1. Iron pyrites. 2. Carburetted or sulphuretted hydrogen.

Sulphurets, PAC. In miners' phrase, the undecomposed metallic ores, usually sulphides. Chiefly applied to auriferous pyrites.

Sump, Corn. (from Germ. Sumpf.). The space left below the lowest landing in a shaft to collect the mine-water. The lowest pump draws from it. 2. Newc. That part of a judd of coal which is extracted first.

Sump-fuse. A waterproof fuse.

Swad, Newc. A thin layer of stone or refuse coal at the bottom of the seam.

Swape. An implement for shaping the edge of a boring-bit.

Swalls, Swallows or Swallow-holes. Surface holes caused by the subsidence of rocks; or openings into which mine-water disappears.

Swamp. A depression in a nearly horizontal bed, in which water may collect.

Swedish process. See German process.

Sweeping table. A stationary buddle.

Sweeps. The dust of the workshops of jewellers, goldsmiths, silversmiths, and assayers and refiners of gold and silver.

Sweet-roasting. See Roasting.

Synclinal. The axis of a depression of the strata; also the depression itself. Opposed to anticlinal, which is the axis of an elevation.

Tackle, CORN. The windlass, rope, and kibble.

Tacklers, DERB. Small chains put around loaded corves.

Tail-house, Tail-mill. The buildings in which tailings are treated. Tailing. See Blossom.

Tailings. The lighter and sandy portions of the ore on a buddle or in a sluice. The headings are accumulated or discharged at the upper end, the middlings in the middle, while the tailings escape at the foot. The term tailings is used in a general sense for the refuse of reduction-processes other than smelting.

Tail-race. The channel in which tailings, suspended in water, are conducted away.

Tamp. To fill (usually with elay-tamping) the bore-hole or other opening through which an explosive charge has been introduced for blasting.

Tamping-bar, Corn.

Tank. A subterranean reservoir into which a pump delivers water for another pump to raise.

Tup-cinder. The cinder drawn from a puddling-furnace or bloomary.

Tap-hole. The opening through which the molten metal is tapped or drawn from a furnace.

Teem, Eng. 1. To dump. 2. To pour steel from a melting-pot. Temper. 1. To grind and mix plastic materials, such as clay, or the ingredients of mortar. 2. To give the metals (especially steel) the desired degree of hardness and elasticity by a process of heating and cooling, suitably regulated. A metallic compound in which these qualities can thus be produced is said to temper, or to take temper.

Tempering-bar. See Furgen.

Temper-screw. A screw-connection for lengthening the column of boring-rods as boring advances.

Tenant-helve, Eng. See Frontal-hammer.

Tepetate, Sp. Waste rock and rubbish in a mine.

Terne-plate. A variety of tin-plate coated with an alloy of one-third tin, and two-thirds lead.

Test. See Cupel.

Test-ring. An oval iron frame for holding a test or movable cupelling-hearth.

Thermo-aqueous. Produced by, or related to, the action of heated waters.

Thill, NEWC. The floor of a coal mine.

Thirling. See Thurling.

Thomas and Gilchrist process. See Basic lining process.

Three-high train. A roll-train composed of three rolls, the bar being entered on one side between the bottom and the middle roll, and on the other side between the middle and the upper roll. The passes in both directions thus take place without reversing the movement of the rolls, as is done in so-called reversing rolls.

Throw. A dislocation or fault of a vein or stratum, which has been thrown up or down by the movement.

Throwing, S. STAFF. The operation of breaking out the spurns, so as to leave the hanging coal unsupported, except by its own cohesion.

Thrust. The breaking down or the slow descent of the roof of a gangway. Compare Creep.

Thurl, S. Staff. To cut through from one working into another.

Thurlings. Passages cut from room to room, in post-and-stall working.

Thurst. The ruins of the fallen roof, after pillars and stalls have been removed.

Ticketings, CORN. Meetings for the sale of ores.

Tick-hole. See Vug.

Tierras, Sp. Fine dirt impregnated with quicksilver ore, which must be made into adobes before roasting.

Tiger. See Nipping-fork.

Tile-copper. See Bottoms (2).

Tiller. See Brace-head.

Tilt-hammer. A hammer for shingling or forging iron, arranged as a lever of the first or third order, and "tilted" or "tripped" by means of a cam or cog-gearing, and allowed to fall upon the billet, bloom, or bar.

Tin-frame, CORN. A sleeping-table used in dressing tin-ore slimes, and discharged by turning it upon an axis till its surface is nearly vertical, and then dashing water over it, to remove the enriched deposit. A machine-frame or self-acting frame thus discharges itself automatically at intervals; a hand-frame is turned for the purpose by hand.

Tin-ores. Tinstone (cassiterite, oxide); tin-pyrites (stannite, sulphide of tin, copper, iron and zine). The latter is not, so far as I am aware, now actually treated for tin. Ores containing it are smelted as copper-ores, and the tin is lost.

Tin-plate. Sheet-iron coated with tin.

Tin-witts, CORN. The product of the first dressing of tin-ores, containing, besides tinstone, other heavy minerals (wolfram and metallic sulphides). It must be roasted before it can be further concentrated. Its first or partial roasting is called rag-burning.

Tipe. To upset or "dump" a skip.

Toadstone. A kind of trap-rock.

Ton. For many things, such as coal and iron, the ton in use is the long ton of 20 hundredweight at 112 pounds avoirdupois. Allowances ("sandage," etc.), are made in weighing pig-iron and other crude metals, so that the "smelter's ton" is still greater. The Cornish mining ton is 21 hundredweight or 2352 pounds avoirdupois.

In gold and silver mining, and throughout the Western States, the ton is the *short* ton of 2000 pounds.

Tonite. A nitrated gun-cotton, used in blasting.

Top-wall. See Hanging-wall.

Torta, Sp. A flat heap of silver ore (slime or pulp) prepared for the patio process.

Tossing or tozing, Corn. 1. Washing ores by violent agitation in water, their subsidence being accelerated by packing or striking with a hammer the keeve in which the operation is performed. Chimming is a similar process on a smaller scale. 2. Refining tin by allowing it, while molten, to fall several feet through the air.

Touchstone. A black, hard stone (basalt or jasper), on which the fineness of an alloy of gold and silver can be tested by comparing its streak with that of a piece of alloy (touch-needle) of known fineness.

Tough-cake. Refined or commercial copper.

Toughening. Refining, as of copper or gold.

Tough-pitch. See Tough-cake.

Towt, NEWC. A piece of old rope.

Train. See Roll-train.

Tram, Wales. 1. A four-wheeled truck to carry a tub, corve, or hutch, or to carry coal or ore on a railroad. 2. One of the rails of a tramroad or railroad.

Trap. In miners' parlance, any dark, igneous or apparently igneous, or volcanic rock.

Trap-door. See Weather-door.

Trapiche, Sp. A rude grinding machine, composed of two stones, of which the upper is fastened to a long pole.

Trapper. NEWC. A boy who opens and shuts the trap-door.

Tribute, CORN. A portion of ore given to the miner for his labor. Tributors are miners working under contract, to be paid by a tribute of ore or its equivalent price, the basis of the remuneration being the amount of clean ore contained in the crude product.

Trip-hammer. See Tilt-hammer.

Trogue. A wooden trough, forming a drain.

Trolly. A small four or two-wheeled truck, without a body. The two-wheeled trolly is used in a rolling-mill to wheel the puddle-balls to the squeezer.

Trombe or Trompe, Fr. An apparatus for producing an air-blast by means of a falling stream of water, which mechanically carries air down with it, to be subsequently separated and compressed in a reservoir or drum below.

Trommel. A revolving sieve for sizing ores.

Trouble, Newc. A dislocation of the strata.

Trow. A wooden channel for air or water.

Trumpeting, S. Staff. A small channel cut behind the brickwork of a shaft lined with masonry.

Trunk, CORN. A long narrow box or square tube, usually of wood.

Trunking, Corn. Separating slimes by means of a trunk.

Tubbing. A shaft-lining of casks or cylindrical caissons, of iron or wood. See Plank-tubbing.

Tubing. Lining a deep bore-hole by driving down iron tubes.

Tubs, Newc. Boxes for lowering coals. See Trolly.

Tuff or Tufa. A soft sandstone or calcareous deposit.

Tug, Derb. The iron hook of a hoisting bucket, to which the tacklers are attached.

Tunnel. 1. A nearly horizontal underground passage, open at both ends to day. 2. PAC. See Adit.

Tunnel-head. The top of a shaft-furnace.

Turbary. A peat-bog.

Turn. A pit sunk in a drift.

Turn-bat. A wooden stick used in turning the tongs which hold a bloom under the hammer.

Turning-house. The first working on a vein where it has been intersected by a cross-cut.

Tut-work. See Dead-work. In general, work paid for by the amount of excavation, not (as in tribute) of product.

Tuyere, Tweer, Twyer or Twere. A pipe inserted in the wall of a furnace, through which the blast is forced into the furnace. Usually the tuyere enters through an embrasure in the masonry (tuyere-arch). A nozzle or interior pipe is frequently inserted at the inner end of the tuyere. By changing the nozzle, the size of the opening for the blast may be thus regulated without changing the tuyere. The latter is either an annular hollow casting of iron (box-tuyere) or bronze (bronze tuyere), or a coil of iron pipe. In either case, water is continually circulated through it, to protect it and the nozzle from the action of the melting materials in the furnace. Spray-tuyeres are open box-tuyeres, in which a spray of water, instead of a current, is employed. This is vaporized by the heat, and passes away as steam.

Tuyere-plate. See Bloomary.

Tying, CORN. See Strake.

Tymp. A hollow iron casting, cooled interiorly by a current of

water, and placed to protect the tymp-arch, or arch over the dam, in a blast furnace having a fore-hearth. (See Open front.)

Under-hand. See Stope.

Underlayer, CORN. A vertical shaft sunk to cut a lode.

Underlie or Underlay, Corn. The departure of a vein or stratum from the vertical, usually measured in horizontal feet per fathom of inclined depth. Thus a dip of 60° is an underlay of three feet per fathom. The underlay expressed in feet per fathom is six times the natural cosine of the angle of the dip. See Dip.

Under-poled copper. Copper not poled enough to remove all sub-

oxide.

Universal train. A roll train having adjustable horizontal and vertical rolls, so as to produce sections of various sizes.

Unwater. To drain or pump water from a mine.

Upcast. 1. A lifting of a coal seam by a dike. 2. The opening through which the ventilating current passes out of a mine. See Downcast.

Upraise. See Rise.

Ure's process. The treatment of quicksilver ores by heating in iron retorts with admixture of lime.

Vall' Alta furnace. See Hähner furnace.

Vamping. The debris of a stope, which forms a hard mass under the feet of the miner.

Vanning, Corn. A method of washing ore on a shovel, analogous to panning. Concentrating machines are sometimes called vanners. See Percussion-table.

Vein. See Lode. The term vein is also sometimes applied to small threads, or subordinate features of a larger deposit.

Vena, Sp. A small vein.

Vend, Newc. The total sales of coal from a colliery.

Verifier. A tool used in deep boring for detaching and bringing to the surface portions of the wall of the bore-hole at any desired depth.

Vermilion. Mercury sulphide.

Vestry, Newc. Refuse.

Veta, Sp. A vein. As compared with vena, veta is the main vein.

Viewer. A colliery manager.

Vigorite. See Explosives.

Vug, vugg, or vugh. A cavity in the rock, usually lined with a crystalline incrustation. See Geode.

Wad-hook. A tool with two spiral steel blades for removing fragments from the bottom of deep bore-holes.

Wagon. A four-wheeled vehicle used in coal mines, usually containing 75 to 100 cubic feet.

Wagon-breast. A breast into which wagons can be taken.

Wale, Newc. To clean coal by picking out the refuse by hand. The boys who do this are called Walers.

Wall. 1. The side of a level or drift. 2. The country-rock bounding a vein laterally.

Wall-plates, CORN. The two side-pieces of a timber frame in a shaft, parallel to the strike of the lode when the shaft is sunk on the lode. The other two pieces are the end-pieces.

Washer. See Ore-washer.

Water-jacket. See Jacket.

Waste, Newc. Old workings. The signification seems to include that of both goaf and gob.

Wastrel. A tract of waste land or any waste material.

Water-barrel or Water-tank. A barrel or box, with a self-acting valve at the bottom, used for hoisting water in lieu of a pump.

Water-level. 1. The level at which, by natural or artificial drainage, water is removed from a mine or mineral deposit. 2. A drift at the water-level.

Water-packer. A water-tight packing of leather between the pipe and the walls of a bore-hole.

Way-shaft. See Blind-shaft.

Weather-door. A door in a level to regulate the ventilating current.

Weathering. Changing under the effect of continued exposure to atmospheric agencies.

Wedging-curb or Wedging-crib, Eng. A curb used to make a water-tight packing between the tubbing in a shaft and the rockwalls, by means of split deals, moss, and wedges, driven in between the curb and the rock.

Weld. To join pieces of metal by pressure, at a temperature below that of complete fusion.

Weld-iron. Wrought-iron. See Iron and Steel.

Weld-steel. See Steel.

Well. The crucible of a furnace.

Welsh process. See English process.

Wetherill furnace. A furnace with perforated iron bottom, under which a blast is introduced, and upon which zinc-ore (red oxide) is reduced.

Wharl or Wharr, Newc. A sledge for hauling corves in low drifts.

Wheal, CORN. A mine.

Whim or Whimsey. A machine for hoisting by means of a vertical drum, revolved by horse or steam power.

Whin or Whinstone, Newc. Basaltic rock; any hard, unstratified rock. In Scotland, greenstone.

Whip. The simplest horse-power hoisting machine, consisting of a fixed pulley and a hoisting rope passing over it, to which the animal is directly attached.

White-ash, Penn. See Coal.

White-damp. A poisonous gas sometimes (more rarely than fire-damp or choke-damp, etc.), encountered in coal mines. It has been supposed to contain carbonic oxide, but this is doubtful.

White furnace. See Howell furnace.

White-lead. Carbonate of lead.

White tin, CORN. Metallic tin.

Whits or Witts, CORN. See Tin-witts.

Whitwell stove. A fire-brick hot-blast stove, on the regenerative system.

Whole-working, Newc. Working where the ground is still whole, i. e., has not been penetrated as yet with breasts. Opposed to pillarwork, or the extraction of pillars left to support previous work.

Wild lead. Zinc-blende.

Wicket. A breast. See Breast, and Post-and-stall.

Wimble. A shell-auger used for boring in soft ground.

Win. To extract ore or coal.

Windbore, NEWC. The pipe at the bottom of a set of pumps.

Winch or Windlass. A man-power hoisting machine, consisting of a horizontal drum with crank handles.

Winding. Hoisting with a rope and drum.

Winds. See Winze.

Winning. 1. A new opening. 2. The portion of a coal field laid out for working.

Winning headways. NEWC. Headways driven to explore and open out the coal seam.

Winze. An interior shaft, usually connecting two levels.

Wood-tin. Tinstone of light wood-color.

Wootz. See Steel.

Work. Ore not yet dressed.

Working. See Labor. The Spanish and the English term are synonymous in meaning and alike in application. A working may be a shaft, quarry, level, open-cut, or stope, etc.

Working-barrel, CORN. The cylinder in which a pump piston

works.

Working home. Working toward the main shaft in extracting ore or coal, as in longwall retreating.

Working-out. Working away from the main shaft in extracting ore or coal, as in longwall advancing.

Work-lead. See Base bullion.

Yellow-ore. Corn. Chalcopyrite. See Copper ores. Yokings. See Stowces.

Zawn, Corn. A cavern.

Ziervogel process. The extraction of silver from sulphuret ores or matte by roasting in such a way as to form sulphate of silver, leaching this out with hot water, and precipitating the silver by means of metallic copper.

Zighyr, zigger, or sieker, Corn. To percolate, trickle or ooze, as water through a crack. From the Germ., siekern.

Zinc-dust. Finely-divided zinc, zinc-oxide, and impurities, incidentally produced in the manufacture of spelter. It is sometimes used as an inferior paint (zinc-gray).


Zinc-gray. See Zinc-dust.

Zinc-ores. Red ore (zincite, oxide); black-jack (zinc-blende, sphalerite, sulphide); zinc-spar (noble calamine, Smithsonite, carbonate, and earthy calamine, hydrozincite, hydrated carbonate); silicious oxide (willemite, anhydrous, and calamine, hydrated silicate).

Zinc-seum. The zinc-silver alloy skimmed from the surface of the bath in the process of desilverization of lead by zinc.

Zinc-white. Oxide of zinc.

Zones. In a shaft-furnace, the different portions (horizontal sections) are called zones, and characterized according to the reactions which take place in them, as the zone of fusion or smelling-zone, the reduction-zone, etc.













REFERENCE ONLY MAY NOT BE BORROWED

TN 9 R37 Mining CARD	me PI S	Rossiter	Worthington
P			

